

EXO Vandal Resistant HD Camera

High Definition Camera Systems for Harsh Environments

- EXVP7C2-2..... Rugged 1080P HD PTZ camera system, 20x optic zoom, H.264, ONVIF, extended temperature range, surge protection with Pendant adaptor
- EXVW7C2-2..... Rugged 1080P HD PTZ camera system, 20x optic zoom, H.264, ONVIF, extended temperature range, surge protection with Wall mount
- EXVP7C2-3..... Rugged 1080P HD PTZ camera system, 30x optic zoom, H.264, ONVIF, extended temperature range, surge protection with Pendant adaptor
- EXVW7C2-3..... Rugged 1080P HD PTZ camera system, 20x optic zoom, H.264, ONVIF, extended temperature range, surge protection with Wall mount



EXO
S E R I E S

Moog Inc.
Sensor and Surveillance Systems

3650 Woodhead Drive Northbrook, IL, USA 60062
+1.847.498.0700 Fax: +1.847.498.1258 www.moogS3.com

IMPORTANT SAFEGUARDS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with damp cloth.
- 7 Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
- 8 Cable Runs- All cable runs must be within permissible distance.
- 9 Mounting - This unit must be properly and securely mounted to a supporting structure capable of sustaining the weight of the unit.

Accordingly:

- a. This installation should be made by a qualified service person and should conform to all local codes.
 - b. Care should be exercised to select suitable hardware to install the unit, taking into account both the composition of the mounting surface and the weight of the unit.
- 10 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 11 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 12 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 13 Only use attachment/ accessories specified by the manufacturer.
 - 14 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
 - 15 Unplug this apparatus during lighting storms or when unused for long periods of time.
 - 16 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Be sure to periodically examine the unit and the supporting structure to make sure that the integrity of the installation is intact. Failure to comply with the foregoing could result in the unit separating from the support structure and falling, with resultant damages or injury to anyone or anything struck by the falling unit.

UNPACKING

Unpack carefully. Electronic components can be damaged if improperly handled or dropped. If an item appears to have been damaged in shipment, replace it properly in its carton and notify the shipper.

Be sure to save:


- 1 The shipping carton and packaging material. They are the safest material in which to make future shipments of the equipment.
- 2 These Installation and Operating Instructions.

SERVICE

If technical support or service is needed, contact us at the following number:

TECHNICAL SUPPORT
AVAILABLE 24 HOURS
1- 800 - 554 -1124

SAFETY PRECAUTIONS

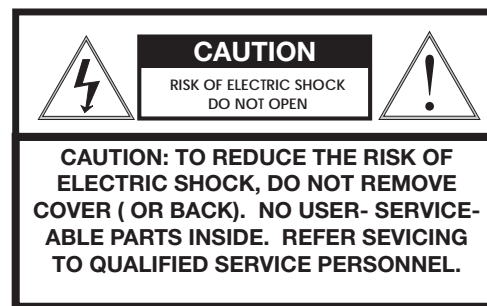

The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk to persons.

Este símbolo se piensa para alertar al usuario a la presencia del “voltaje peligroso no-aislado” dentro del recinto de los productos que puede ser un riesgo de choque eléctrico.

Ce symbole est prévu pour alerter l'utilisateur à la présence “de la tension dangereuse” non-isolée dans la clôture de produits qui peut être un risque de choc électrique.

Dieses Symbol soll den Benutzer zum Vorhandensein der nicht-Isolier “Gefährdungsspannung” innerhalb der Produkteinschließung alarmieren die eine Gefahr des elektrischen Schlages sein kann.

Este símbolo é pretendido alertar o usuário à presença “di tensão perigosa non-isolada” dentro do cerco dos produtos que pode ser um risco de choque elétrico.

Questo simbolo è inteso per avvertire l'utente alla presenza “di tensione pericolosa” non-isolata all'interno della recinzione dei prodotti che può essere un rischio di scossa elettrica.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Este símbolo del punto del exclamacion se piensa para alertar al usuario a la presencia de instrucciones importantes en la literatura que acompaña la aplicación.

Ce symbole de point d'exclamation est prévu pour alerter l'utilisateur à la présence des instructions importantes dans la littérature accompagnant l'appareil.

Dieses Ausruf Punktsymbol soll den Benutzer zum Vorhandensein de wichtigen Anweisungen in der Literatur alarmieren, die das Gerät begleitet.

Este símbolo do ponto do exclamacion é pretendido alertar o usuário à presença de instruções importantes na literatura que acompanha o dispositivo.

Questo simbolo del punto del exclamacion è inteso per avvertire l'utente alla presenza delle istruzioni importanti nella letteratura che accompagna l'apparecchio.

MADE IN
USA
BUY AMERICA COMPLIANT • COUNTRY OF ORIGIN U.S.A.

Product Warranty Registration

Register Your Products Online

www.moogS3.com/technical-support/product-registration

Moog values your patronage. We are solely committed to providing you with the highest quality products and superior customer service. With 3-Year and 5-Year warranties (depending on the product purchased) we stand behind every product we sell.

See full warranty details at www.moogS3.com/technical-support/warranty-plan/

Register your products today to receive the following benefits:

- Simple and Trouble-Free RMA process
- Product / software updates
- Special promotions
- Eliminate the need to archive purchase documents such as receipts, purchase orders, etc.

Limited Warranty for Moog Products

Moog - Decatur Operations, subsequently referred to as “Manufacturer,” warrants these products to be free from defects in material or workmanship as follows:

PRODUCT CATEGORY	PARTS \ LABOR
All Enclosures and Electronics	Five (5) Years
Accessory Brackets	Five (5) Years
Controllers	Three (3) Years
Power Supplies / IR Illuminators	Three (3) Years
Poles / PolEvators™ / CamEvator	Three (3) Years
Warrior Series™ / Q-View™	Three (3) Years
SView Series™	Three (3) Years 6 months if used in auto scan / tour operation
DeputyDome™, NiteTrac™, Igloo Dome, PurgeDome™	Three (3) Years 6 months if used in auto scan / tour operation
EXO Series™ Dome and Fixed Camera Systems*	Three (3) Years 6 months if used in auto scan / tour operation
EXO Series™ GeminEye Visible and Thermal Camera Systems	One (1) Year

During the labor warranty period, to repair the Product, Purchaser will either return the defective product, freight prepaid, or deliver it to Manufacturer at Moog Decatur Operations, 2525 Park Central Boulevard, Decatur, Georgia, 30035. The Product to be repaired is to be returned in either its original carton or a similar package affording an equal degree of protection with a RMA # (Return Materials Authorization number) displayed on the outer box or packing slip. To obtain a RMA# you must contact our Technical Support Team at 800.554.1124, extension 101. Manufacturer will return the repaired product freight prepaid to Purchaser. Manufacturer is not obligated to provide Purchaser with a substitute unit during the warranty period or at any time. After the applicable warranty period, Purchaser must pay all labor and/or parts charges. The limited warranty stated in these product instructions is subject to all of the following terms and conditions.

TERMS AND CONDITIONS

1. NOTIFICATION OF CLAIMS: WARRANTY SERVICE: If Purchaser believes that the Product is defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by Purchaser to Manufacturer. All claims for warranty service must be made within the warranty period. If after investigation, Manufacturer determines the reported problem was not covered by the warranty, Purchaser shall pay Manufacturer for the cost of investigating the problem at its then prevailing per incident billable rate. No repair or replacement of any Product or part thereof shall extend the warranty period of the entire Product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the Product parts warranty, whichever is greater.

2. EXCLUSIVE REMEDY: ACCEPTANCE: Purchaser's exclusive remedy and Manufacturer's sole obligation is to supply (or pay for) all labor necessary to repair any Product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts.

3. EXCEPTIONS TO LIMITED WARRANTY: Manufacturer shall have no liability or obligation to Purchaser with respect to any Product requiring service during the warranty period which is subjected to any of the following: abuse, improper use, negligence, accident, or acts of God (i.e., hurricanes, earthquakes), modification, failure of the end-user to follow the directions outlined in the product instructions, failure of the end-user to follow the maintenance procedures recommended by the International Security Industry Organization, written in product instructions, or recommended in the service manual for the Product. Furthermore, Manufacturer shall have no liability where a schedule is specified for regular replacement or maintenance or cleaning of certain parts (based on usage) and the end-user has failed to follow such schedule; attempted repair by non-qualified personnel; operation of the Product outside of the published environmental and electrical parameters, or if such Product's original identification (trademark, serial number) markings have been defaced, altered, or removed. Manufacturer excludes from warranty coverage Products sold AS IS and/or WITH ALL FAULTS and excludes used Products which have not been sold by Manufacturer to the Purchaser. All software and accompanying documentation furnished with, or as part of the Product is furnished "AS IS" (i.e., without any warranty of any kind), except where expressly provided otherwise in any documentation or license agreement furnished with the Product. ANY COST ASSOCIATED WITH REMOVAL OF DEFECTIVE PRODUCT AND INSTALLATION OF REPLACEMENT PRODUCT IS NOT INCLUDED IN THIS WARRANTY.

4. PROOF OF PURCHASE: The Purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

DISCLAIMER OF WARRANTY

EXCEPT FOR THE FOREGOING WARRANTIES, MANUFACTURER HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY OTHER COMPARABLE STATE STATUTE. MANUFACTURER HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-MANUFACTURER PRODUCTS OR NON-MANUFACTURER RECOMMENDED PRODUCTS PURCHASER MAY CHOOSE TO CONNECT TO THE PRODUCT.

LIMITATION OF LIABILITY

THE LIABILITY OF Manufacturer, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL MANUFACTURER BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REPLACEMENT LABOR COSTS, REIMBURSEMENT, OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR FOR ANY OTHER REASON WHATSOEVER.



Electrical Specifications

Power 24VAC
Class 2 Only

EXPF7
EXSS7
EXSP7
EXRHW(P)7



24 VAC
3.2 Amps
Total Power: 75 Watts
Tools Required:

English

.100" Flat Head Screwdriver
Phillips Head Screwdriver
7/16" Wrench or Socket



24 VAC
3.2 amperios
Energía Total: 75 vatios
Las Herramientas Requerieron: Destornillador Principal Plano Del 100"
Destornillador Principal Phillips

Español



24 VCA
3.2 ampères
Puissance Totale : 75 watts
Les Outils besoin :

Français

Tournevis Principal Plat De 100"
Tournevis Principal Phillips



24 VAC
3.2 Ampere
Gesamtenergie: 75 Watt
Werkzeuge Erforderten: 100"Flacher Hauptschraubenzieher
Kreuzkopfhauptschraubenzieher

Deutsch



24 VAC
3.2 ampères
Poder Total: 75 watts
As Ferramentas Requereram: Chave de fenda Principal Lisa Do 100"
Chave de fenda Principal Phillips



Portuguese




24 VAC
3.2 ampère
Alimentazione Totale: 75 watt
Attrezzi Richiesti: Cacciavite Capo Piano Del 100"
Cacciavite Capo "phillips"

Italiano

Contents of Box

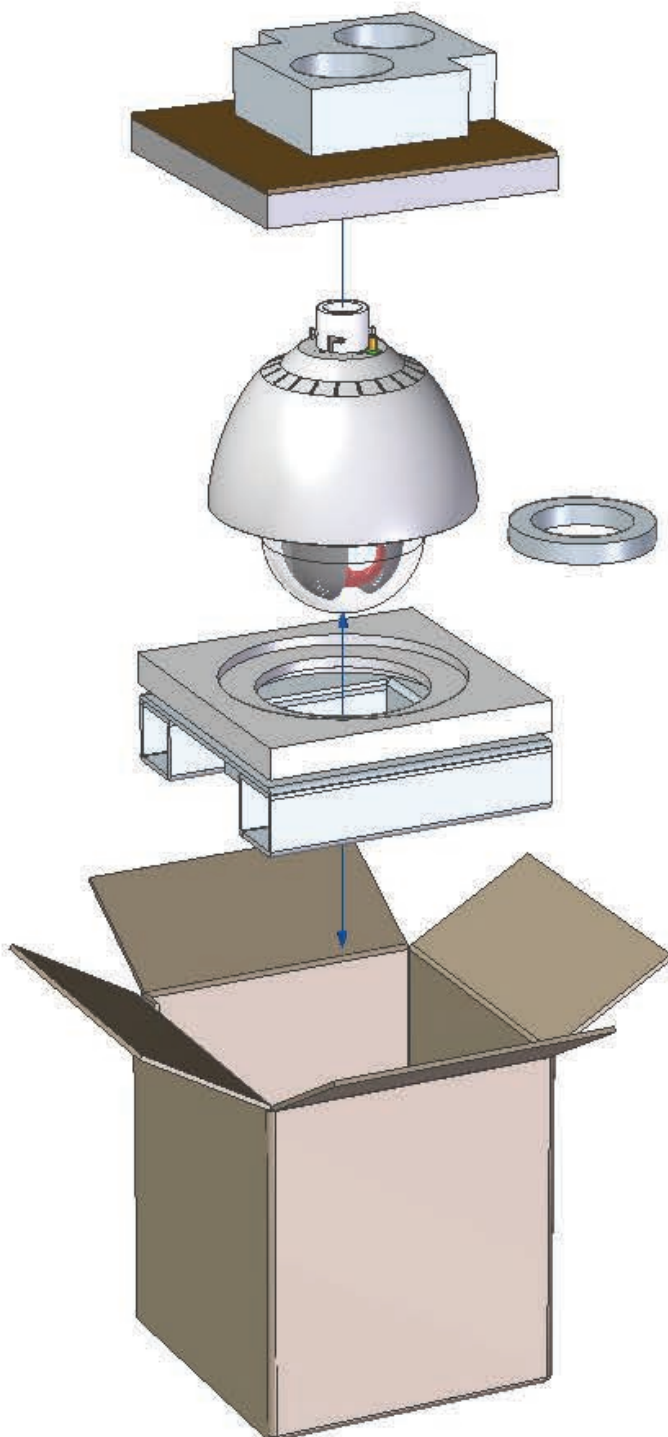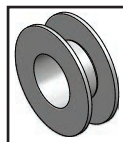


1

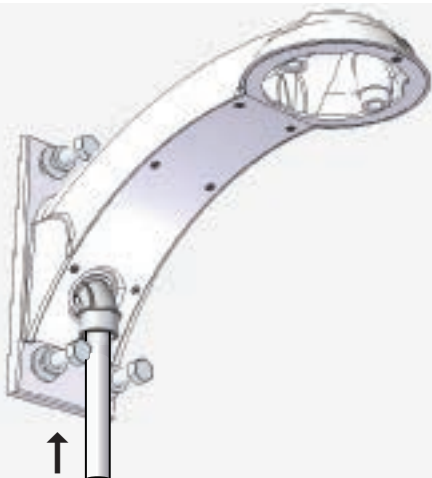

Bracket is designed for 45° conduit fitting (If using the conduit). Run wire into bracket, secure to wall.

- El soporte se diseña para la guarnición del conducto 45° (si usa el conducto). Funcione con el alambre en el soporte seguro para emparedar.
- La parenthèse est conçue pour l'ajustage de précision du conduit 45° (si à l'aide du conduit). Courez le fil dans la parenthèse bloquée pour murer.
- Haltewinkel ist für Befestigung des Rohres 45° bestimmt (wenn das Rohr verwendet wird). Lassen Sie Draht in den Haltewinkel laufen, der, um zu ummauern sicher ist.
- O suporte é projetado para o encaixe da canalização 45° (se usando a canalização). Funcione o fio no suporte seguro para murar.
- La staffa è progettata per il montaggio del condotto 45° (se per mezzo del condotto). Faccia funzionare il legare nella staffa sicura per murare.


2

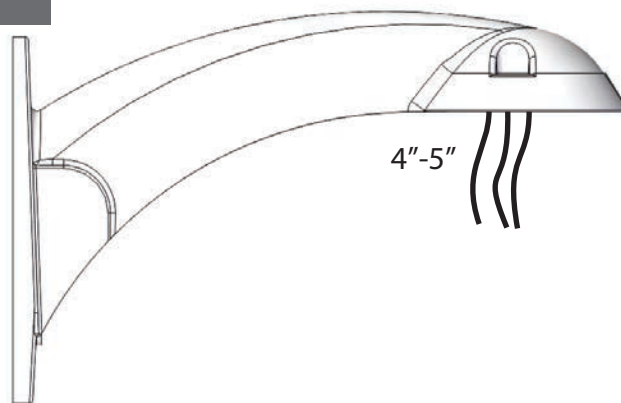

Trim incoming control and power wires to 4"- 5", for either wall or pendent bracket.

- Recorte de control de entrada y los cables de alimentación de 4 " - 5", para pared o soporte independiente.
- Coupez le contrôle d'entrée et les câbles d'alimentation à 4 " - 5", soit pour mur ou un support indépendant.
- Trim eingehenden Kontrolle und Macht Drähte bis 4 " - 5", für Wand-oder hängende Halterung.
- & entrante do controle da guarnição; pnhá fios a 4" - 5", para a parede ou o suporte pendent.
- & ricevuto di controllo della disposizione; alimenti i legare a 4,, - 5,, per la parete o la staffa pendent.


3

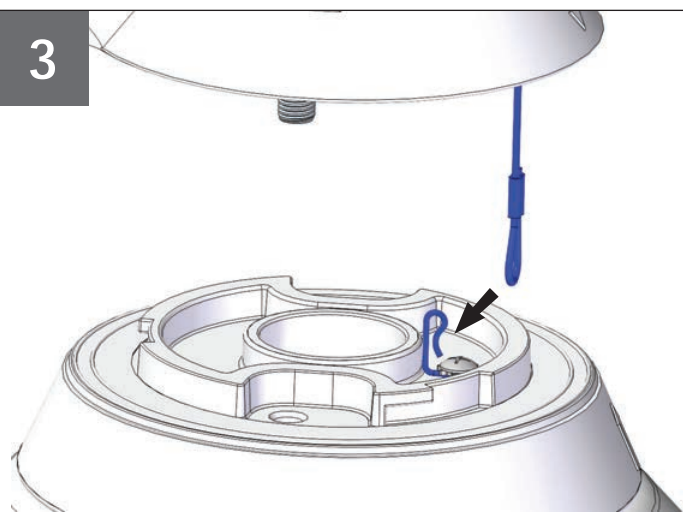

Secure lanyard to lanyard clip.

- Asegure el acollador al clip del acollador.
- Fixez la lanière à l'agrafe de lanière.
- Befestigen Sie Abzuglinie an Abzuglinieclip.
- Fixe o colhedor ao grampo do colhedor.
- Assicuri la cordicella alla clip della cordicella.


4

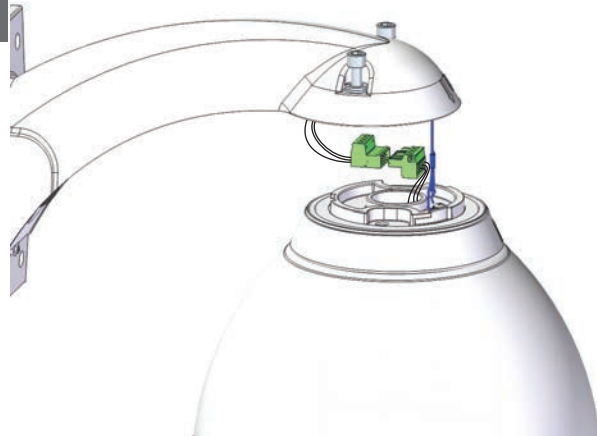

Complete **ALL** wiring connections.

- Termine TODAS LAS conexiones del cableado.
- Accomplissez TOUS LES raccordements de câblage.
- Schließen Sie ALLE Verdrahtungsanschlüsse ab.
- Termine TODAS AS conexões da fiação.
- Completati TUTTI I collegamenti dei collegamenti.

5

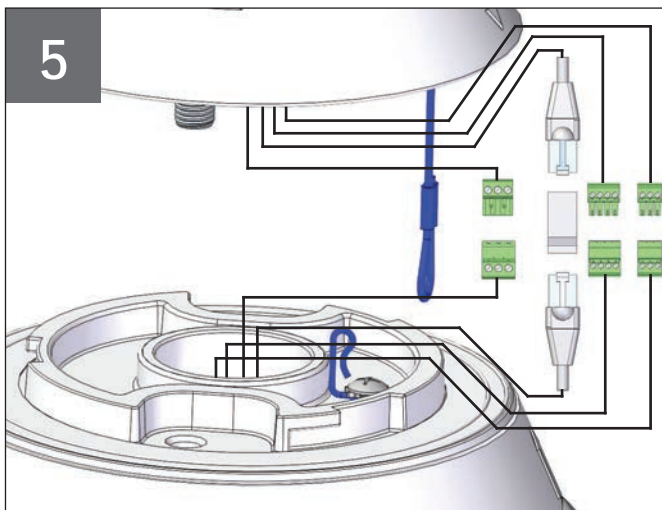


Wiring the dome can be completed by referring to the diagram.

- Atar con alambre la bóveda puede ser terminada refiriendo al diagrama.
- Le câblage du dôme peut être accompli en se rapportant au diagramme.
- Das Verdrahten der Haube kann durchgeführt werden, indem man auf das Diagramm sich bezieht.
- Wiring a abóbada pode ser terminado consultando ao diagrama.
- Legare la cupola può essere completato riferendosi allo schema.

6


Important
Gasket
Must be
in place

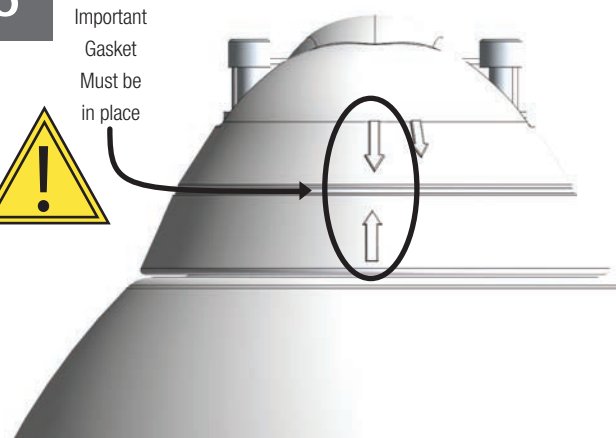

Align large arrows.

- Alinee las flechas grandes.
- Alignez les grandes flèches.
- Richten Sie große Pfeile aus.
- Alinhe grandes setas.
- Allini le grandi frecce.

7

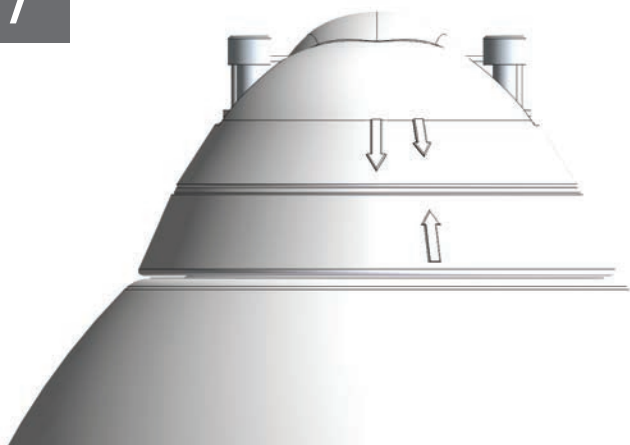

To lock, turn clockwise.

- Para trabarse, dar vuelta a la derecha.
- Pour fermer à clef, tourner dans le sens des aiguilles d'une montre.
- Zu sich verriegeln, nach rechts drehen.
- Para travar, para girar no sentido horário.
- Per per chiudere, girare in senso orario.

8



Secure with 1/4" Allen wrench.

- Asegure con la llave Allen del 1/4".
- Fixez clé Allen avec de 1/4 ».
- Sichern Sie mit 1/4" Inbusschlüssel.
- Fixe com chave Allen do 1/4 de".
- Fissi con chiave di Allen del 1/4,,.


9



Trim incoming control and power wires to 4-5" for either wall or pendant bracket.

- Ajuste los alambres entrantes del control y de la energía a 4-5" para la pared o el soporte pendiente.
- Équilibrez les fils entrants de commande et de puissance à 4-5 » pour le mur ou la parenthèse en suspens.
- Trimmen Sie ankommende Steuer- und Energiendrähte bis 4-5" entweder für Wand oder pendant Haltewinkel.
- Ajuste os fios entrantes do controle e do poder a 4-5" para a parede ou o suporte pendent.
- Aspetti i legare ricevuti di potere e di controllo a 4-5,, per la parete o la staffa pendent.

10

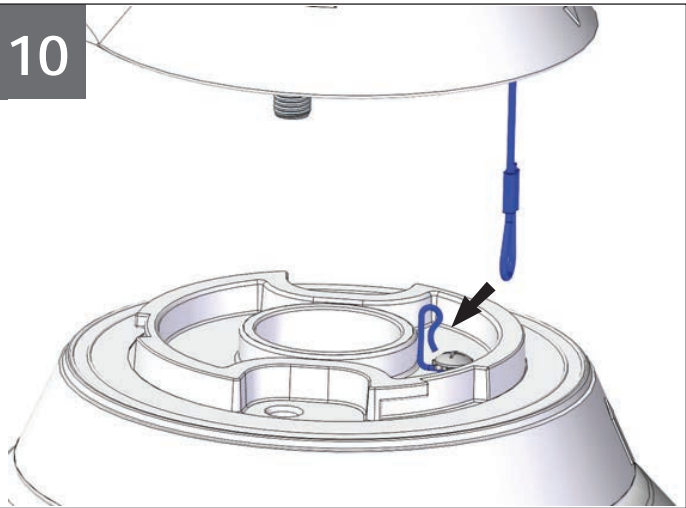

Secure lanyard to lanyard clip.

- Asegure el acolador al clip del acolador.
- Fixez la lanière à l'agrafe de lanière.
- Befestigen Sie Abzuglinie an Abzuglinieclip.
- Fixe o colhedor ao grampo do colhedor.
- Assicuri la cordicella alla clip della cordicella.


11



Complete all wiring connections (coax wire not supplied).

- Termine todas las conexiones del cableado (alambre coaxial no suministrado).
- Accomplissez tous les raccordements de câblage (fil coaxial non fourni).
- Schließen Sie alle Verdrahtungsanschlüsse ab (koaxialer Draht nicht geliefert).
- Termine todas as conexões da fiação (fio co-axial não fornecido).
- Completi tutti i collegamenti dei collegamenti (legare coassiale non fornito).

12

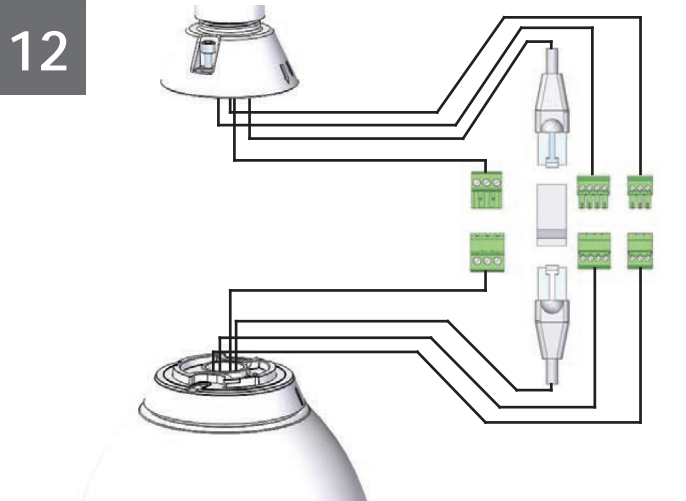

Wiring the dome can be completed by referring to the diagram.

- Atar con alambre la bóveda puede ser terminada refiriendo al diagrama.
- Le câblage du dôme peut être accompli en se rapportant au diagramme.
- Das Verdrahten der Haube kann durchgeführt werden, indem man auf das Diagramm sich bezieht.
- Wiring a abóbada pode ser terminado consultando ao diagrama.
- Legare la cupola può essere completato riferendosi allo schema.


13



Align large arrows.

- Alinee las flechas grandes.
- Alignez les grandes flèches.
- Richten Sie große Pfeile aus.
- Alinhe grandes setas.
- Allini le grandi frecce.

14

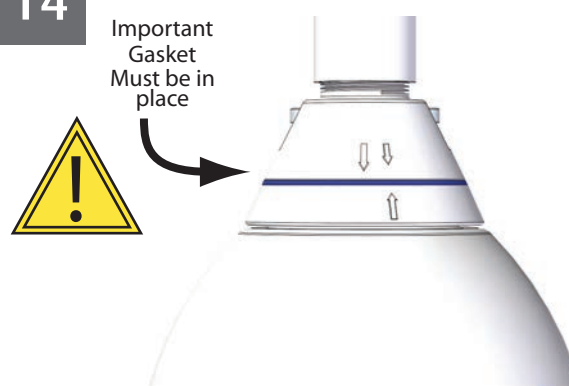

To lock, turn clockwise.

- Para trabarse, dar vuelta a la derecha.
- Pour fermer à clef, tourner dans le sens des aiguilles d'une montre.
- Zu sich verriegeln, nach rechts drehen.
- Para travar, para girar no sentido horário.
- Per per chiudere, girare in senso orario.


15



Secure with 1/4" Allen wrench.

- Asegure con la llave Allen del 1/4".
- Fixez clé Allen avec de 1/4".
- Sichern Sie mit 1/4" Inbusschlüssel.
- Fixe com chave Allen do 1/4 de".
- Fissi con chiave di Allen del 1/4".

16

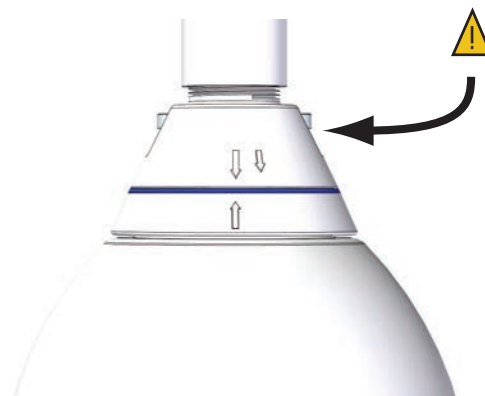


To loosen - unscrew bolts 1/2 turn counter clockwise.

- Para aflojar - desatornille a la derecha contrario de la vuelta del 1/2 de los pernos".
- Pour se desserrer - dans le sens des aiguilles d'une montre de tour dévissez de boulons 1/2 » contre-.
- Um sich zu lösen - schrauben Sie Schraubbolzen 1/2" Umdrehungs-Gegenrechtses herum ab.
- Para afrouxar - desaparafuse sentido horário contrário volta do 1/2 dos parafusos da".
- Per allentare - sviti in senso orario di girata del 1/2 dei bulloni,, contro.

Wiring Connections for ALL Housings

17

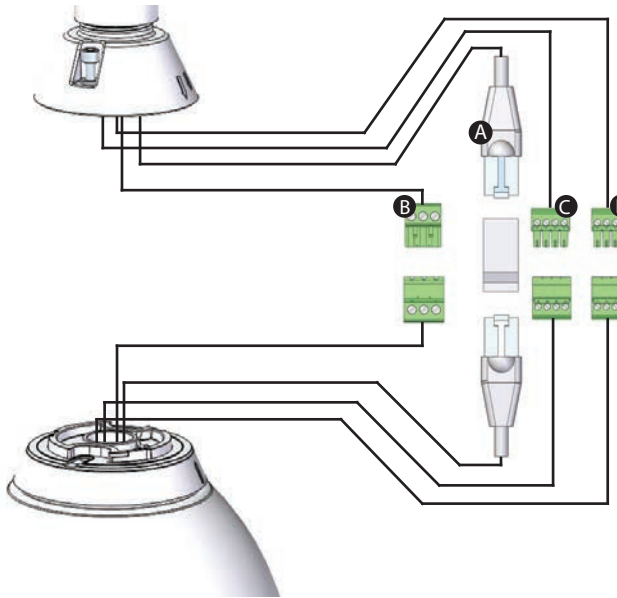

A

RJ45

B

24VDC			POWER
1	24Vac	Red	75 Watts
2	24Vac	Orange	
3	GND	Green/White	

C

AUDIO		
1	Speaker +	Gray
2	Audio GND	Brown
3	MIC +	White

D

ALARM		
1	Alarm (In)	Blue
2	Alarm (Out)	Black/White
3	Alarm (In/GND)	Violet
4	Alarm (Out)	Red/White

Make the appropriate male and female connections.

- Haga las conexiones masculinas y femeninas apropiadas.
- Établissez les rapports masculins et femelles appropriés.
- Stellen Sie die passenden männlichen und weiblichen Beziehungen her.
- Faça as conexões masculinas e fêmeas apropriadas.
- Faccia i collegamenti maschili e femminili adatti.


18

Total vA consumed	Wire Gauge								MM ² AWG
	.5	.75	1.0	1.5	2.5	4	6		
	22	20	18	16	14	12	10		
5.5	ft	m	400	600	960	-	-	-	
			121	182	292				
10	120	180	300	480	800	1300	-		
	36.5	54.9	91.4	146	243	396			
20	89	141	225	358	571	905	1440		
	27.1	43.0	68.6	109	174	275	438		
30	65	90	130	225	350	525	830		
	19.8	27.4	39.6	68.6	106	160	252		
40	44	70	112	179	285	452	720		
	13.4	21.3	34.1	54.6	86.9	138	219		
50	35	56	90	143	228	362	576		
	10.6	17.1	27.4	43.6	69.5	110	175		
60	29	47	75	119	190	301	480		
	9.4	14.3	22.9	36.2	57.9	91.7	146		
70	25	40	64	102	163	258	411		
	8.8	12.2	19.5	31.1	49.7	78.6	125		
80	31	34	55	85	140	215	340		
	7.6	10.3	16.8	25.9	42.7	65.5	103		

These are recommended maximum distances for 24VAC with a 10% voltage drop.

- Estos se recomiendan las distancias máximas para 24VAC con una gota del voltage del 10%.
- Ceux-ci sont recommandés des distances maximum pour 24VAC avec une chute de tension de 10%.
- Diese werden maximale Abstände für 24VAC mit einem 10% Spannungsabfall empfohlen.
- Estes são recomendados distâncias máximas para 24VAC com uma queda de tensão de 10%.
- Questi sono suggeriti distanze massime per 24VAC con una differenza di potenziale di 10%.


19

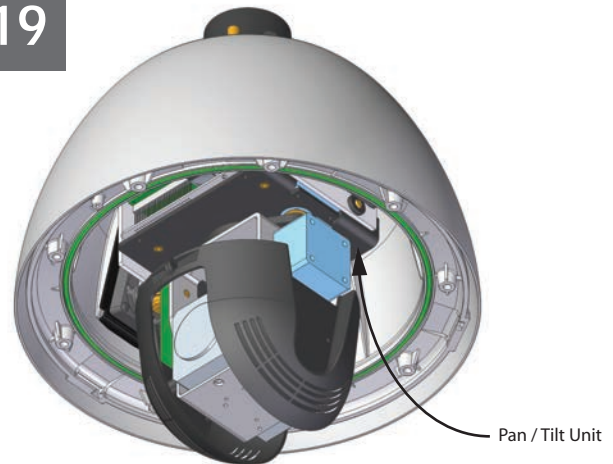

To add SD card, you must remove Pan / Tilt unit.

- Para añadir una tarjeta SD, debe quitar Pan / unidad Tilt.
- Pour ajouter carte SD, vous devez supprimer Pan / Tilt unité.
- Auf SD-Karte hinzufügen, müssen Sie entfernen Pan / Tilt-Einheit.
- Para adicionar cartão SD, você deve remover o Pan / Tilt unidade.
- Per aggiungere scheda SD, è necessario rimuovere Pan / Tilt unità.


20

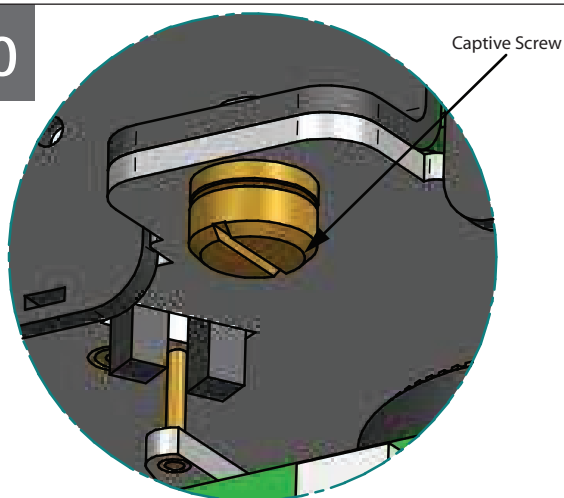

To remove, loosen captive screw.

- Para quitarlo, tornillo cautivo suelto.
- Pour l'enlever, vis captive lâche.
- Zum Entfernen loser unverlierbare Schraube.
- Para remover, parafuso solto.
- Per rimuovere, sciolto vite imperdibile.


21

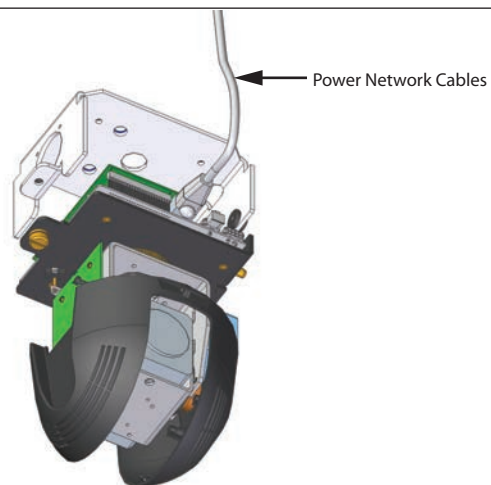

Disconnect cables, and remove Pan / Tilt from base bracket in housing.

- Desconecte los cables y retire la cacerola / de la inclinación del soporte de base en materia de vivienda.
- Débranchez les câbles, puis retirez Pan / Tilt de support de base en matière de logement.
- Ziehen Sie die Kabel, und entfernen Pan / Tilt aus Grundträger im Gehäuse.
- Desconecte os cabos e remover Pan / Tilt do suporte de base em habitação.
- Scollegare i cavi e rimuovere Pan / Tilt dalla staffa base in custodia.


22

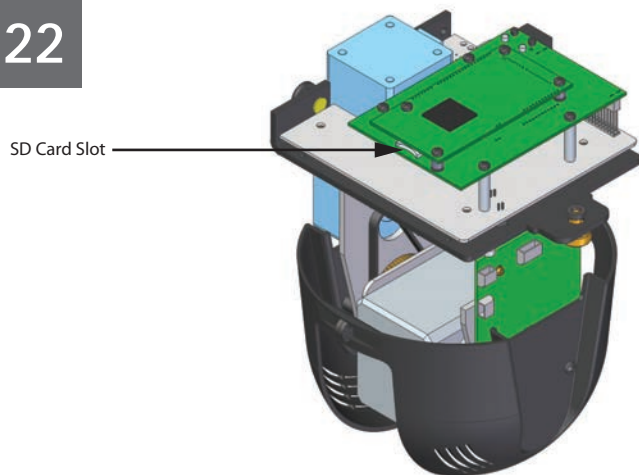

SD card slot is located at the base of Pan / Tilt unit.

- Ranura para tarjetas SD se encuentra en la base? De la unidad Pan / Tilt.
- Fente pour carte SD se trouve à la base? De l'unité de Pan / Tilt.
- SD-Kartensteckplatz an der Basis liegt der Pan / Tilt-Einheit.
- Slot para cartão SD está localizado na base? De Pan / Tilt unidade.
- Slot per scheda SD si trova alla base? Del Pan / Tilt unità.


23

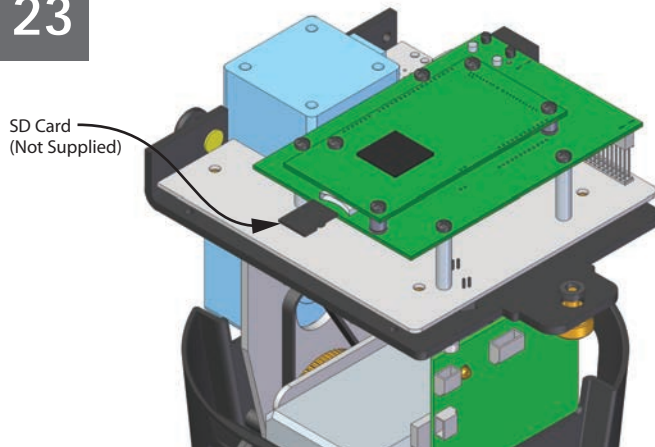

Insert SD card if application requires.

- Inserte la tarjeta SD si la aplicación requiere.
- Insérez la carte SD si l'application l'exige.
- Legen Sie eine SD-Karte, wenn die Anwendung erfordert.
- Insira o cartão SD se a aplicação requer.
- Inserire la scheda SD se l'applicazione richiede.


24

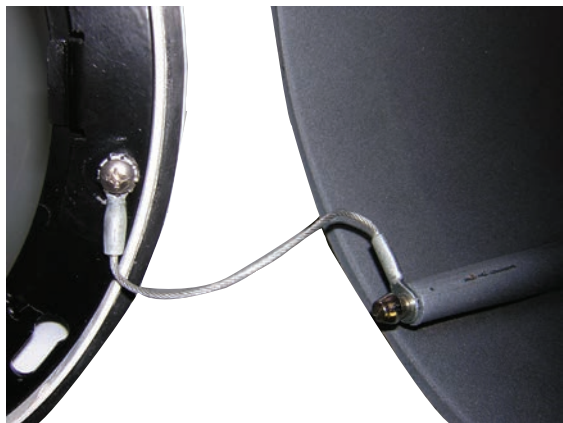

Connect Lanyard to trim ring assembly.

- Conecte el acollador con el montaje del anillo del ajuste.
- Reliez la lanière à l'anneau d'équilibre.
- Schließen Sie Abzuglinie an Ordnung Ring an.
- Conecte o colhedor ao conjunto do anel da guarnição.
- Collegli la cordicella al complessivo dell'anello della cornice.

25

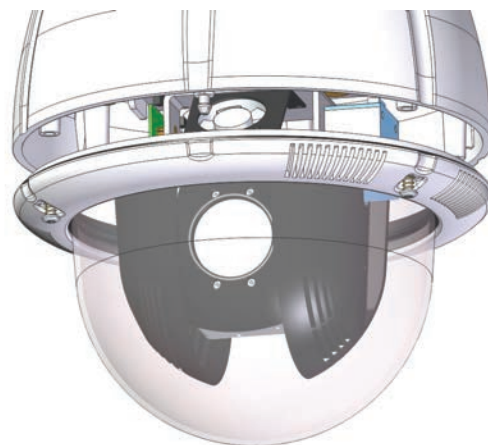

Align key slot to housing pins, close and turn counterclockwise, secure screws to lock.

- Alinear ranura de la llave a los pines de vivienda, cierre y gire en sentido contrario, asegurar los tornillos de bloqueo.
- Alignez la fente clé de broches de logement, fermer et tourner vers la gauche, vis sécurisées pour le verrouiller.
- Richten Keilschlitz zu Gehäusestifte, schließen und gegen den Uhrzeigersinn drehen, sichere Schrauben zu verriegeln.
- Alinhe a ranhura chave pinos de habitação, feche e vire anti-horário, parafusos de segurança para bloquear.
- Allineare fessura chiave per perni presenti, chiudere e girare in senso antiorario, viti sicure per bloccare.


Replacement Parts List

EXVW7C2-2

EXVP7C2-2

EXVW7C2-3

EXVP7C2-3

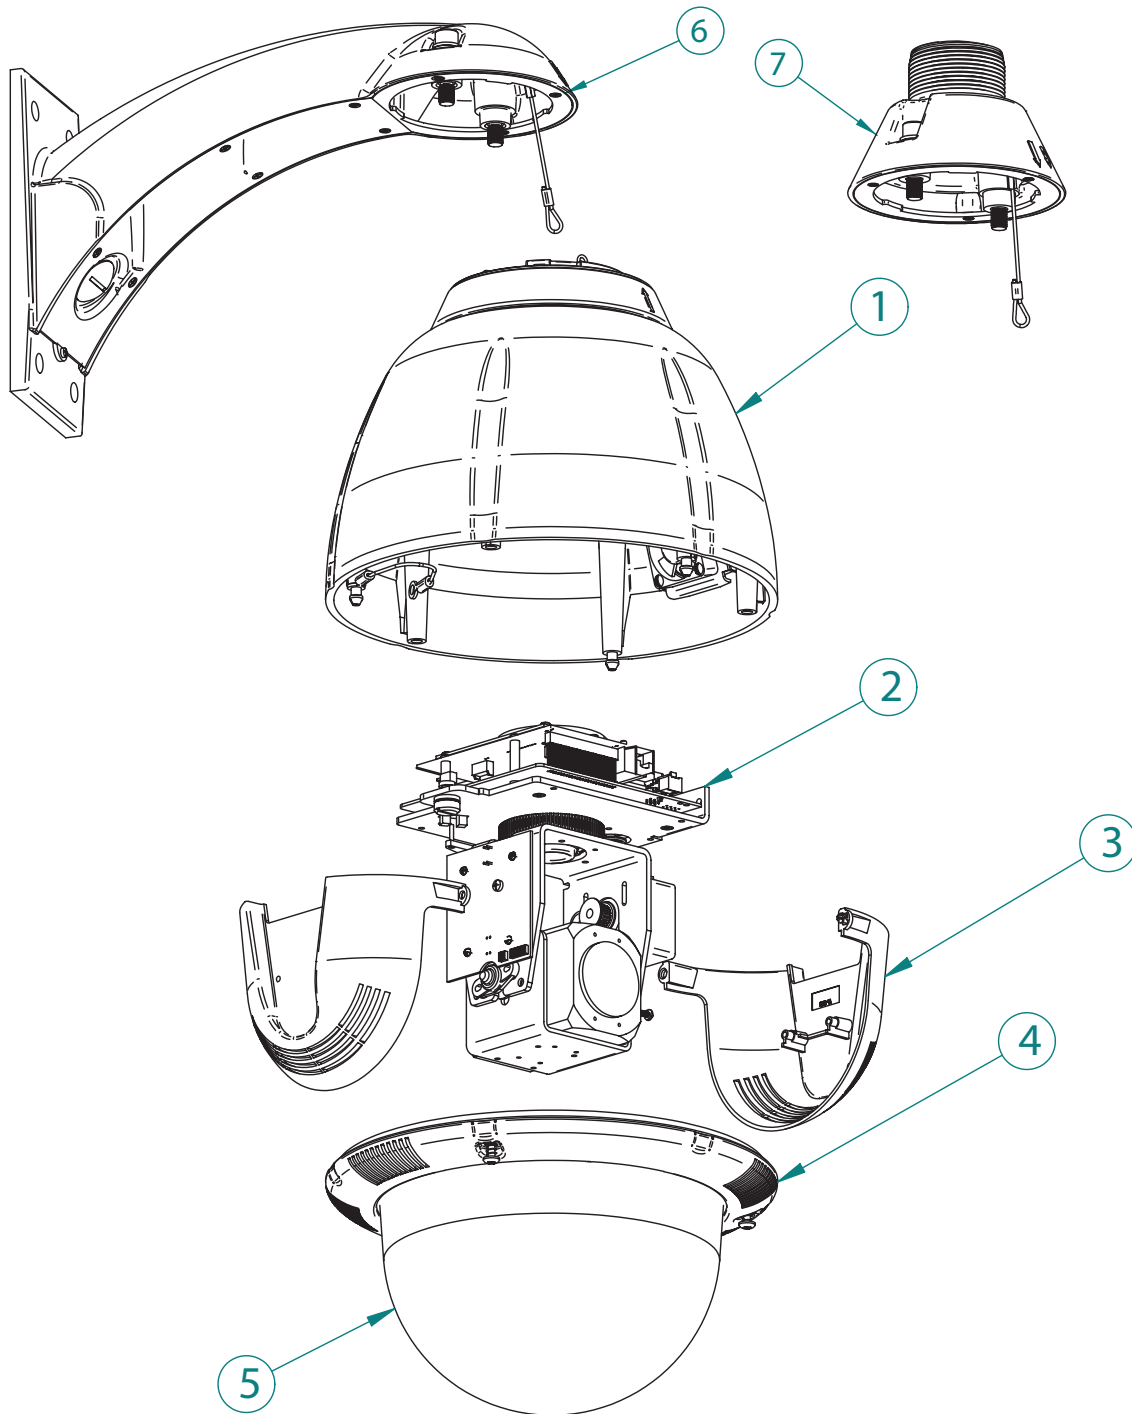

PART NUMBER	DESCRIPTION
1	111-HGR73641G Metal Housing Top Assembly
2	65-EXPT-2000 20x Pan Tilt Assembly
2	65-EXPT-3000 30x Pan Tilt Assembly
3	30-VL4281 Liner Assembly (2 parts)
4	25-DCR7-9000 Trim Ring Assembly - PC Dome _Clear
5	20-DC4357 PC Dome Clear
5	20-DT4357 PC Dome Tinted
6	110-50VL3551G Wall Mount Bracket
7	110-50VL3606G Pendent Mount Bracket

TABLE OF CONTENTS

Software Sections

Moog Discovery Tool	1.0.0
Using the Moog EXO Web Application	2.0.0
System Status	2.1.0
System Configuration	2.2.0
Configuration / Date Time	2.2.1
Configuration / Network	2.2.2
Configuration / Network / DHCP	2.2.3
Configuration / Network / Host Name Configuration-NPT ..	2.2.4
Configuration / Network / HTTP	2.2.5
Configuration / Network / API - Bonjour	2.2.6
Configuration / Network / SNMP Configuration	2.2.7
Configuration / Network / RTSP Configuration	2.2.8
Configuration / Network / Multicast	2.2.9
Configuration / Video In	2.3.0
Configuration / Video In / Video Input	2.3.1
Configuration / Video In / Sensor	2.3.2
Configuration / Video In / Video Compression	2.3.3
Configuration / Video In / Point to Point	2.3.4
Configuration / Video In / Text Overlay	2.3.5
Configuration / Video In / Motion Detection	2.3.6
Configuration / Video In / Privacy Zones	2.3.7
Configuration / Audio In	2.3.8
Configuration / Audio Out	2.3.9
Configuration / Recording	2.4.0
Configuration / User Accounts	2.4.1
Maintenance	3.0.0
Live Viewer	4.0.0
Live Viewer Pan / Tilt and Presets	4.1.0
Recording	5.0.0
Performing Batch Firmware Update	6.0.0
Point to Point Connections	7.0.0
Troubleshooting Guide	8.0.0

SOFTWARE SETUP

1.0.0 Moog Discovery Tool

By factory default, the Moog EXO Camera is configured in DHCP. If you are not using a DHCP server it will automatically allocate itself an APIPA (Automatic Private IP Addressing) address in the range 169.254.0.1 to 169.254.255.254 with subnet mask 255.255.0.0.

Initial device network configuration is done via the Moog Discovery Tool (MDT), a tool provided by Moog that can be found on the company's web site and on the flash drive supplied with each camera system. The flash drive also contains a copy of Microsoft Silverlight 5. Both programs should be installed on the your local server.


The MDT plays 3 important roles:

1. Discovery of all Moog EXO Cameras
2. Allows for remote configuration of the IP address and subnet mask
3. Permits batch firmware upgrade of all common EXO devices


Note: Silverlight is a free plug in and is required to interface with the Moog EXO Web browser.

Once your device is installed on your network and powered up, launch MDT from any computer on the network and the following window will be displayed:

The MDT supports 2 ways to discover a device. The first way doesn't need any configuration and uses the Bonjour discovery protocol. In order to be able to discover a device via Bonjour, the network must support multicast delivery.

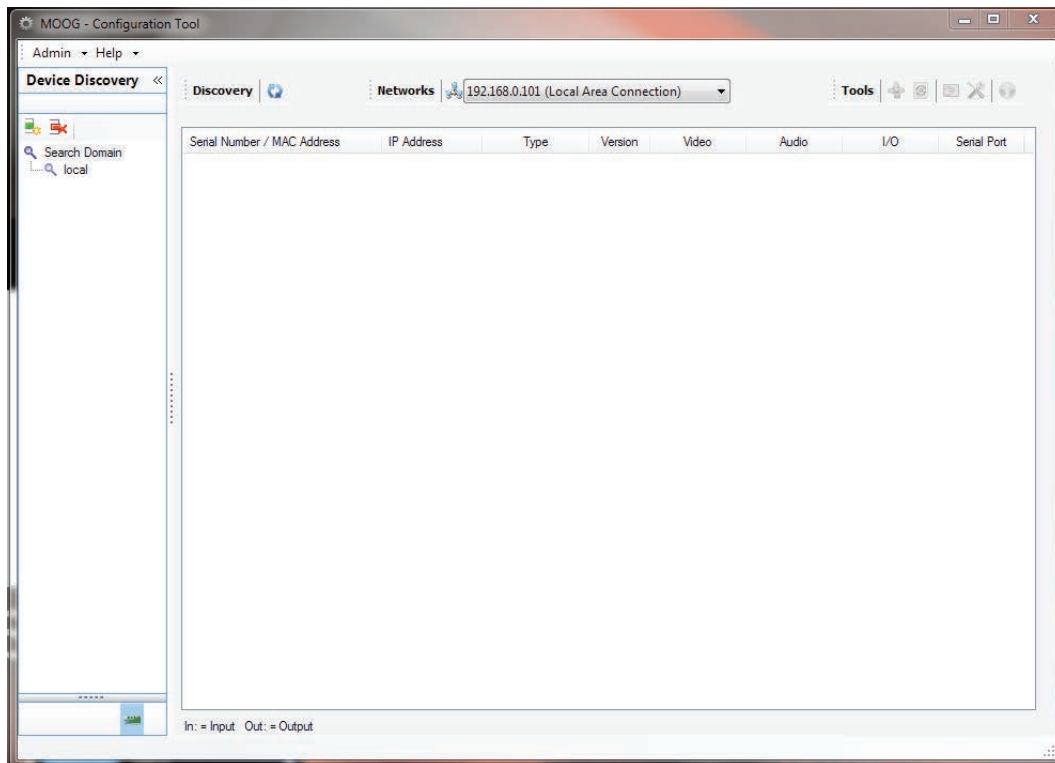


If it is not the case, you can use the second way, which is the Unicast Discovery. The Unicast Discovery can be configured by using the "Unicast Discovery" configuration form. This configuration form is available via the Admin / Unicast Discovery menu option.

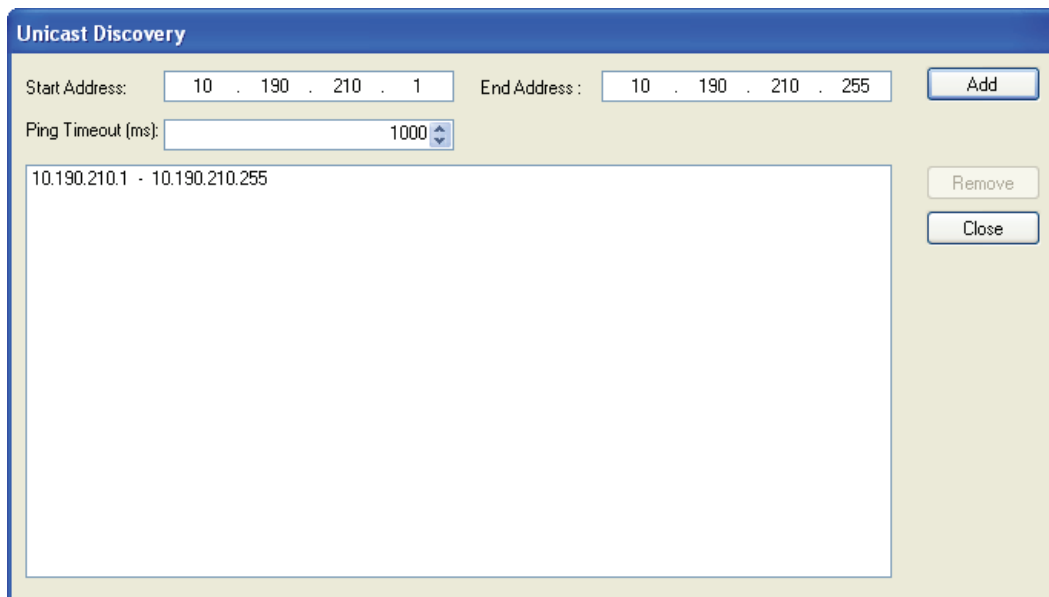


To configure the Unicast Discovery, add one or more IP address ranges. The Unicast Discovery tries to reach a device at a specific IP address in the configured ranges. The discovery can be a long process if the range of IP addresses is large and the device is at the end of the range. To accelerate the discovery, add several small ranges of IP addresses. The ping timeout option can be increased for a high latency network.

The MDT will display as many devices as it discovers on the network

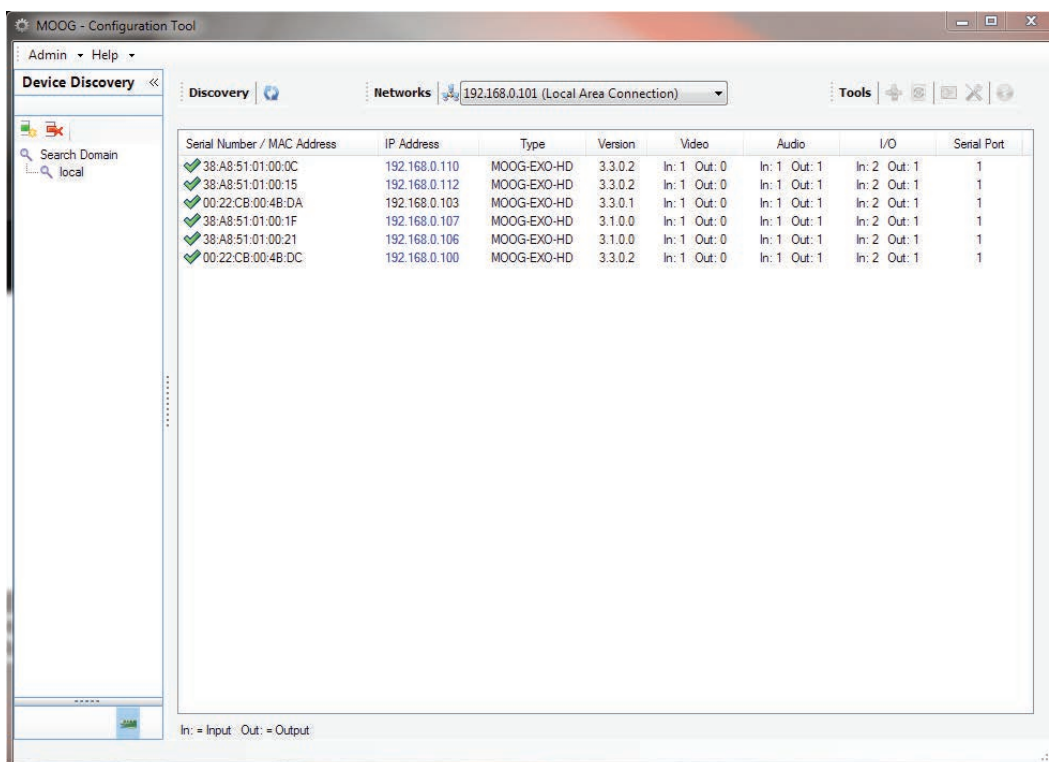

If no DHCP server was able to assign an IP address to a Moog EXO Camera, it will appear in the MDT device list with an APIPA address (169.254.*.*). If a Moog EXO Camera displays an APIPA address it must be configured with a valid IP address before it can be remotely configured by selecting the "Assign IP address" from the selection list and configuring the TCP / IP settings.

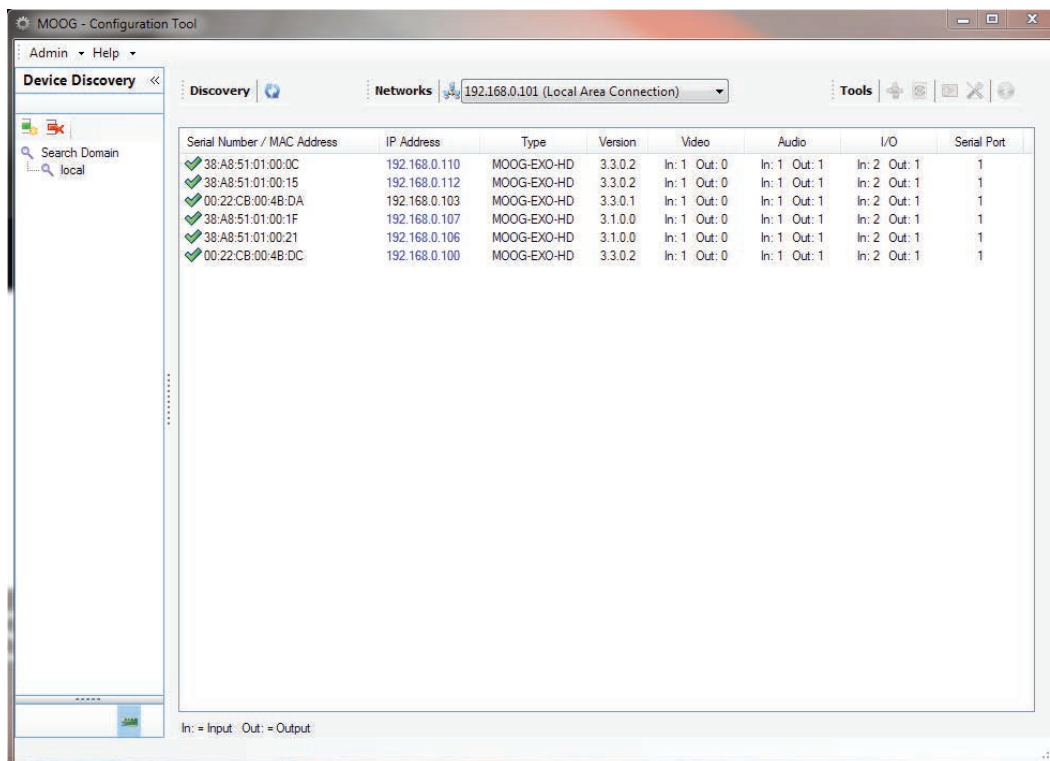

To assign IP Address, update firmware, or configure Moog web interface, right click on highlighted serial number / Mac Address.

The screenshot shows the 'IP Address Assignment' dialog box. It has a title bar with the text 'IP Address Assignment'. Inside, there are three input fields for network configuration:

- Start Address:** 192 . 168 . 0 . 1
- Subnet Mask :** 255 . 255 . 0 . 0
- Gateway :** 0 . 0 . 0 . 0

There are two buttons on the right: 'Start' and 'Close'. Below these fields is a 'Status' section with a large empty text area and a vertical scrollbar. At the bottom of the dialog is a small empty text box.

Assign IP Address(es)


Once the IP information is set, the Silverlight web application served by the EXO Camera can be launched from the MDT or directly in your web browser by typing the device's IP address in the address bar. You can start to use your networked video management system for final system configuration or you can configure advanced parameters using the Moog EXO web based management.

2.0.0 Using the Moog EXO Web Application

Application


When entering the Web Application, the following window will be displayed. You will be asked a username and password. The default User name and Password is 'admin'.

(To reset the user name and password see / Configurations / User Accounts)

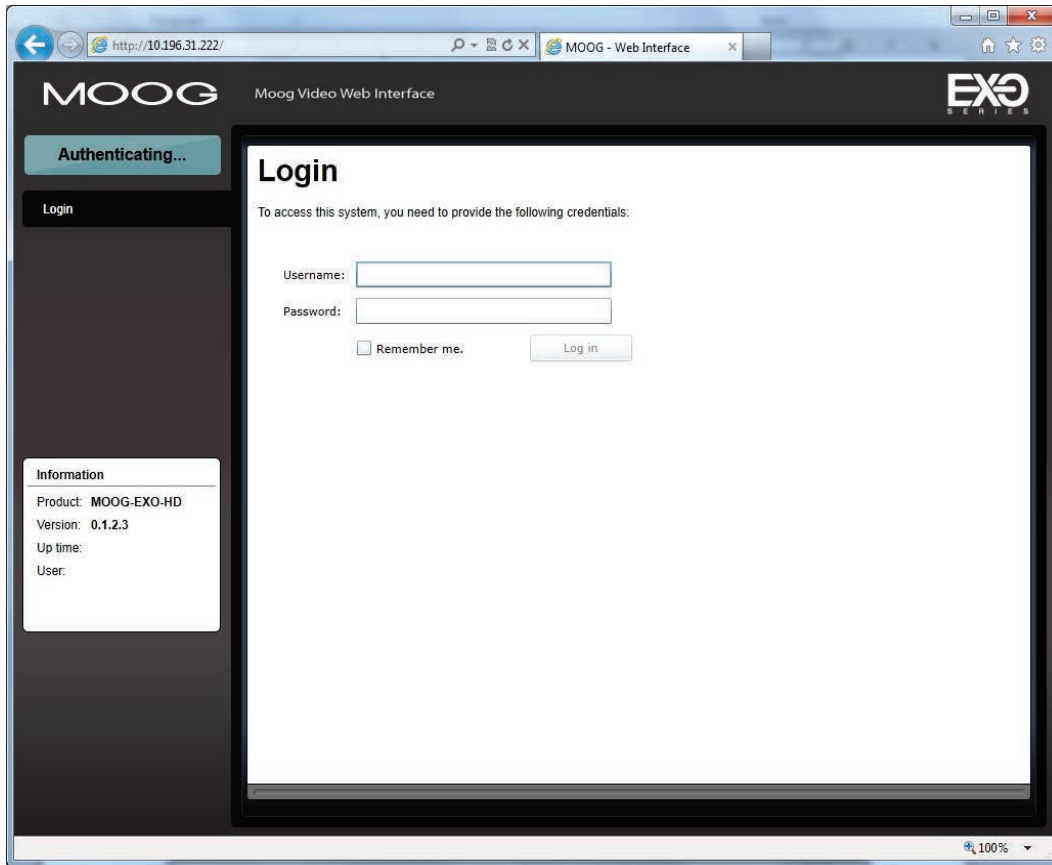


The screenshot shows a web browser window with the address bar displaying `http://10.196.31.222/`. The page title is "MOOG - Web Interface". The main content area is titled "Login" and contains the following text: "To access this system, you need to provide the following credentials:". Below this text are two input fields: "Username:" and "Password:". There is a checkbox labeled "Remember me." and a "Log in" button. The left sidebar contains a "Login" button and an "Information" box with the following details: Product: MOOG-EXO-HD, Version: 0.1.2.3, Up time: , and User: . The top right corner features the "EXO SERIES" logo.

2.1.0 System Status

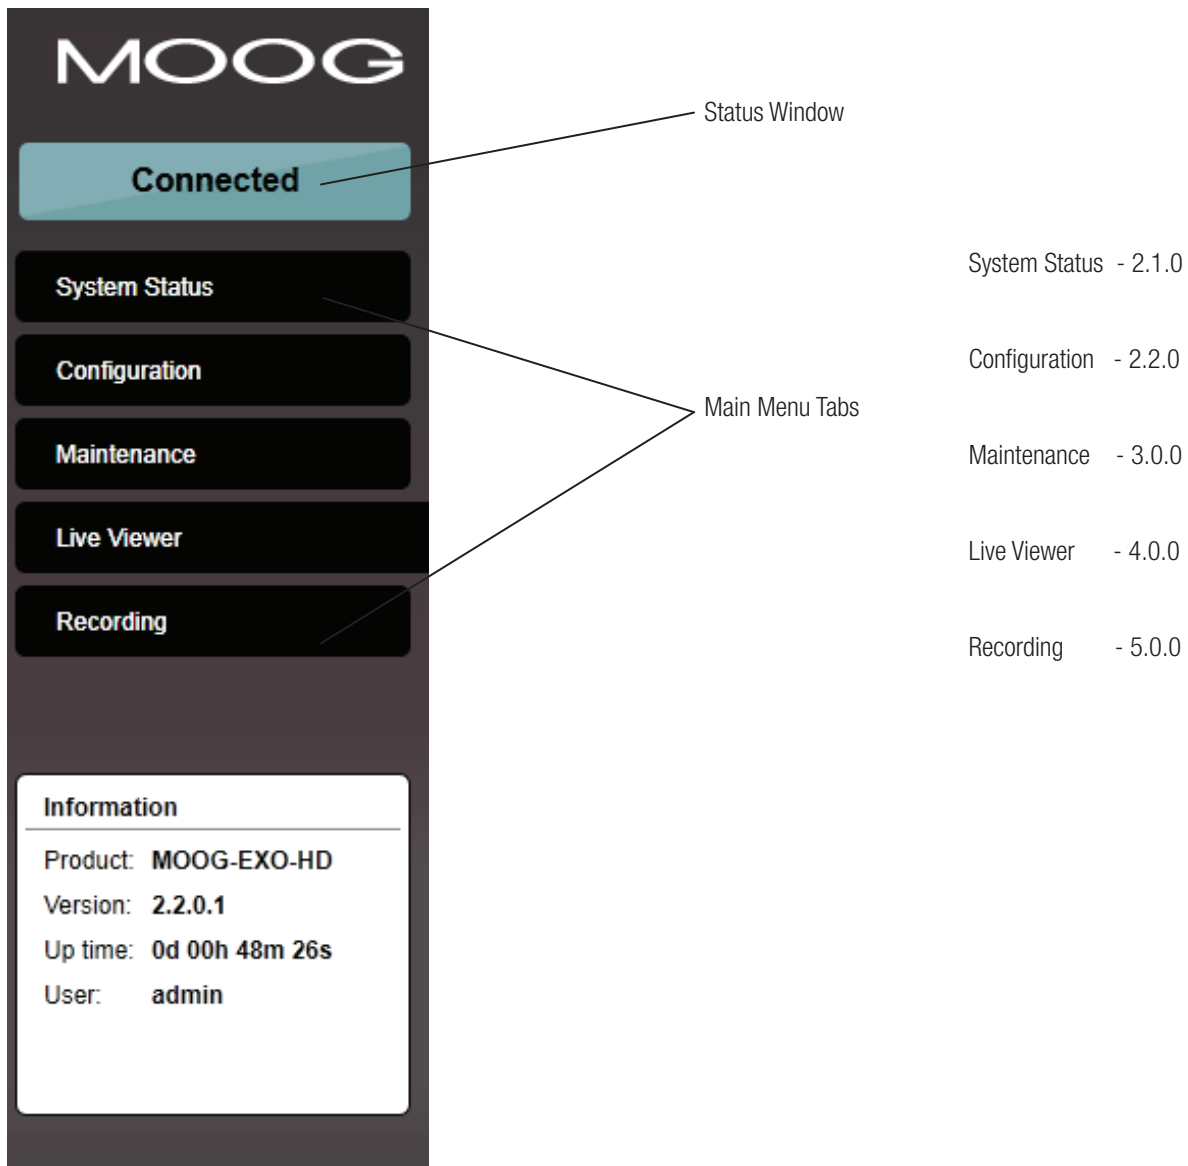

Upon successfully logging into the web interface, a welcome screen will be displayed. The welcome screen shows general device health status as well as firmware version and system uptime.

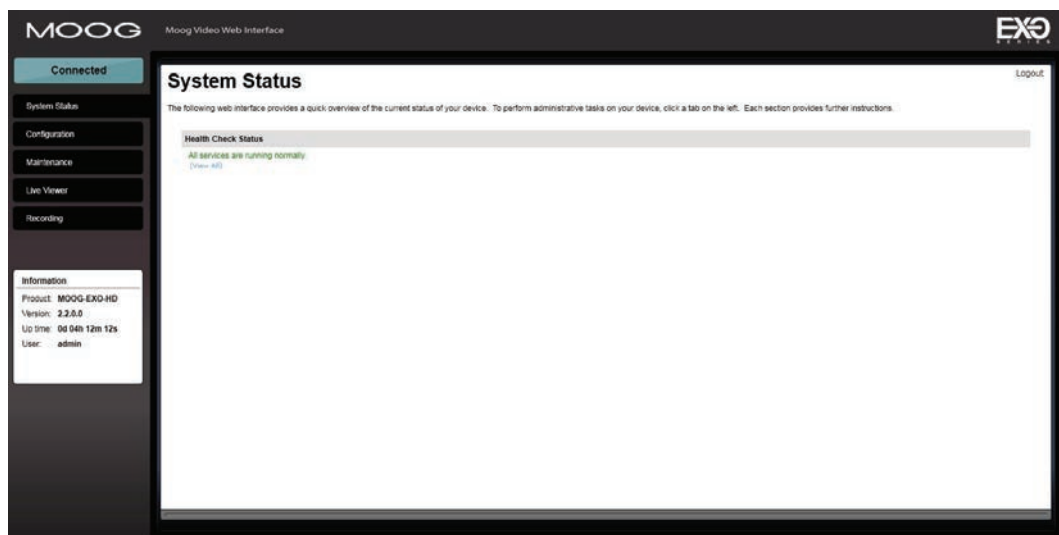

2.2.0 System Configuration

Configuration / System

Under the *Configuration* section, select the *System* tab to perform the following operations:

- View product model information, current firmware version and serial number.
- Specify a custom name; this name can be used by third-party software to display a selected name for the device.

Configuration

Please select from the following subsections:

The screenshot shows a web-based configuration interface for a system. At the top, there is a row of tabs: 'System', 'Date / Time', 'Network', 'Video In', 'Audio In', 'Audio Out', 'Recording', and 'User Accounts'. The 'System' tab is currently selected. Below the tabs is a large rectangular area containing a 'General' subsection. The 'General' subsection has a 'Hide' button in its top right corner. Inside the 'General' subsection, the following information is displayed: 'Product type: MOOG-EXO-HD-20X', 'Serial number: E200-3130-3200-4BDC', 'Firmware version: 2.2.0.3.8469', 'Custom name: Unknown' (with a text input field), and 'Use Recorder Module' with a checked checkbox. At the bottom of the configuration window, there are two buttons: 'Save' and 'Cancel'.

- Enable edge recording by checking the box “Use Recorder Module” checkbox. Disabling edge recording will accelerate the device’s boot time.

- To enable edge recording an SD card must be added to the camera interface card, located on the EXO pan/tilt device.
SD cards are not provided as a standard feature. Directions for installing the SD card are provided in the first section of this installer manual. Edge recording set up is done through the Recording Tab in the Live Viewer EXO screen.

- Note: Recording menu will only be displayed when user recorder module check box is selected. You must save, and then reboot to complete selection.

- SD Card: Use 2GB to 32 GB Micro SD Card of class 6 or above. You must make sure the card is formatted to FAT32 or EXT3.

2.2.1 Configuration / Date Time

Configuration

Please select from the following subsections:

System

Date / Time

Network

Video In

Audio In

Audio Out

User Accounts

General

Hide

Current UTC Time: 05/06/2013 10:27:41

Date / Time Update

Hide

Time zone: (GMT) Coordinated Universal Time

Update UTC Time: 05/06/2013 09:08:37

Sync

Save

Cancel

Under the **Configuration** section, select the **Date Time** tab to perform the following operations:

- Set the time zone in which the device is operating.
- Manually set the current date and time for the device's internal clock.
- Note: For an accurate time stamp, you must sync UTC Time.

2.2.2 Configuration / Network

Configuration / Network

Configuration

Please select from the following subsections:

System

Date / Time

Network

Video In

Audio In

Audio Out

User Accounts

Network Interface #1 - Local Area Connection - eth0

Hide

☒ Use DHCP

IP address: 192.168.0.100 Subnet mask: 255.255.255.0 Default gateway: 192.168.0.1

Host Name Configuration

Show

NTP Configuration

Show

HTTP Configuration

Show

API Selection

Show

Bonjour

Show

SNMP

Show

RTSP Configuration

Show

Multicast

Show

2.2.3 Configuration / Network / DHCP

Under the **Configuration** section, select the **Network** tab to perform the following operations:

- Set the encoder's IP parameters; DHCP or static IP information.
- Configure an NTP server to allow the device to automatically update its internal clock using an NTP server.

2.2.4 Configuration / Network / Host Name Configuration-NPT

Host Name Configuration		Hide
Host name:	<input type="text"/>	
NTP Configuration		Hide
NTP server address:	<input type="text"/>	

NPT Server- use when desiring to have local network time as default, to do so you must.....

2.2.5 Configuration / Network / HTTP

- Change the device's HTTP configuration, **Note: Avoid changing these settings unless absolutely necessary.**

HTTP Configuration		Hide
HTTP port:	<input type="text" value="80"/>	(1 - 65535)
HTTPS port:	<input type="text" value="443"/>	(1 - 65535)
Authentication mode:	<input type="text" value="Digest"/>	
	<input checked="" type="checkbox"/> Accept HTTPS connections	
	<input type="checkbox"/> Accept HTTPS only	

2.2.6 Configuration / Network / API- Bonjour

NOTE:

- To control the EXO Camera system with a VMS software system, you must enable the required Network APIs. Enable PSIA or GENETEC API depending on which VMS platform you intend to use with the device. Disabling any unrequired APIs will accelerate boot time.

API Selection		Hide
<input type="checkbox"/>	PSIA	
<input type="checkbox"/>	GENETEC API	
Bonjour		Hide
Search domain:	<input type="text" value=""/>	.local
<input checked="" type="checkbox"/>	Bonjour Discovery Enabled	

- Note: ONVIF standard is built in and does not require activation. If using ONVIF you do not need to select an API.
- Set Bonjour discovery protocol settings.
- Modify SNMP settings to match with any SNMP software you wish to use for monitoring the device.

2.2.7 Configuration / Network / SNMP Configuration

SNMP		Hide
Agent Port:	<input type="text" value="161"/>	(1 - 65535)
Enabled:	<input checked="" type="checkbox"/> V1 <input checked="" type="checkbox"/> V2 <input checked="" type="checkbox"/> V3	
V1/V2 Read Community:	<input type="text" value="public"/>	
V1/V2 Write Community:	<input type="text" value="public"/>	
V3 Security:		
Users:	<input checked="" type="checkbox"/> Allow users with Administrator-level rights	
	<input checked="" type="checkbox"/> Passwords shorter than 8 characters will be repeated to fill 8 characters.	
Authentication Method:	<input type="text" value="None"/>	
Privacy Method:	<input type="text" value="None"/>	
Privacy Passphrase:	<input type="text" value="....."/>	

2.2.8 Configuration / Network / RTSP Configuration

RTSP Configuration		Hide
RTSP server port:	<input type="text" value="554"/>	(1 - 65535)
Session Timeout:	<input type="text" value="30"/>	(1 - 120)
Authentication mode:	<input type="text" value="Digest"/>	

2.2.9 Configuration / Network / Multicast

If using Multicast output, Insert Multicast start IP, and select start port.

Multicast		Hide
Multicast start IP:	<input type="text" value="237.0.0.1"/>	
Multicast start port:	<input type="text" value="40000"/>	(1 - 65535)
Multicast TTL:	<input type="text" value="1"/>	(1 - 255)

2.3.0 Configuration / Video In

2.3.1 Configuration / Video In / Video Input

The screenshot shows the 'Video In' configuration tab. At the top, there are tabs for System, Date / Time, Network, Video In (selected), Audio In, Audio Out, and User Accounts. Below the tabs is a 'Preview' section with a video feed of a street scene and a 'Refresh' button. Underneath is the 'General' section with the following settings: 'Enable video input' is checked; 'Digital Format' is set to '1080p30'; 'Wide Conversion' is set to 'Stretch'; 'Second Encoder' is set to 'MJPEG'; and 'Associated audio' is set to an empty dropdown. Below the General section are several expandable sections: 'Sensor', 'Video Compression', 'Point to Point', 'Text Overlay', 'Motion Detection', and 'Privacy Zones', each with a 'Show' or 'Hide' button.

Under the Configuration section, select the Video In tab to perform the following operations:

Digital format – choices are, 720 30fps, 720 60fps, 1080 30fps, 1080 25fps. Note max camera output with WDR Active is 15fps (1080p).

2.3.2 Configuration / Video In / Sensor

Configure camera bloc / sensor parameters. These parameters will also be saved to the camera bloc itself if possible:

The screenshot shows the 'Sensor' configuration tab. At the top, there are tabs for System, Date / Time, Network, Video In (selected), Audio In, Audio Out, and User Accounts. Below the tabs is the 'Sensor' section with the following settings: 'Mirror' is set to 'None'; 'Auto Focus' is checked; 'Wide Dynamic Range' is unchecked; 'IR Cut-Retractable (ICR)' is unchecked; 'Auto ICR' is checked; 'Auto ICR Threshold' is set to '5' (range 0 - 100); 'White Balance' is set to 'Outdoor Auto'; 'Auto Exposure' is set to 'Auto'; 'Enable Digital Zoom' is checked; 'Zoom' Initial is '0' (range 0 - 100); 'Zoom' Current * is '0' (range 0 - 100); 'Digital Zoom' Initial is '0' (range 0 - 100); 'Digital Zoom' Current * is '0' (range 0 - 100); 'Use Transparent Port' is unchecked; and there is a 'Reset Sensor' button. At the bottom, a note states: '* Make sure to reload the current values before using them, they may change without the current page being updated'.

Use the narrow pull down function for vertical and horizontal rotation of the image.

(Note: Activating WDR at 1080P will reduce maximum frame rate to 15fps.)

Configure video compression parameters for any of the three available codec instances (Primary H.264, Secondary H.264 and MJPEG). Most VMS software solutions will interact with these parameters and thus it is suggested to leave these at default values in the web interface.

VBR aggressiveness however is unique to Moog EXO Cameras and proposes various levels (disabled to aggressive) of motion triggered rate control. The more aggressive the setting, the more variation motion will have on the rate control. It is strongly suggested to disable VBR aggressiveness for low bit rate scenarios (below 1Mbps) as this parameter may negatively affect perceived video quality.

2.3.3 Configuration / Video In / Video Compression

Video CompressionHide

Select An Encoder :
☒ Enable encoder

Profile:
Resolution:
Frame per sec (fps):
Target bit rate (bps):
Rate control:
Minimum QP:
Maximum QP:
Intra Interval:
VBR Aggressiveness:
Multicast IP:
☐ Static

Primary H.264
main
1920x1080
4 (1 - 250)
1000000 (10000 - 4000000)
Constant Rate
16 (16 - 51)
51 (16 - 51)
8 (0 - 1000)
Disabled
224.16.17.1

Disabled
Conservative
Moderate
Aggressive

Set Quantization (QP) level to desired rate. The higher the number the greater the compression. (16 very low, 51 very high)

- | | |
|---------------------------|---|
| Frame Rate | - Allows you to specify the frame rate to be used by the codec. |
| Rate Control | - Allows you to choose between Variable Bit Rate and Constant Bit Rate . The first option will instruct the H.264 codec to dynamically adjust the bit rate in order to meet both the target quality (QP) and frame rate settings. The second option will instruct the H.264 codec to prioritize target bit rate and vary quality (QP) first and frame rate as a last resort. |
| Min/Max QP | - This parameter allows you to specify the compression range that the codec will use to determine image quality during compression. In order to force a specific quality setting, you can set the minimum and maximum to the same value. The lower the value, the better the quality will be. |
| VBR Aggressiveness | - This parameter allows you to specify if the codec should take into account the level of motion in the image for bit rate calculations. You can select from Conservative , Moderate and Aggressive options for this setting. Using the <i>Conservative</i> option, the codec will allow bit rate to drop up to ¾ of the configured target bit rate when no motion is detected in the image. Using the <i>Moderate</i> option, the codec will allow bit rate to drop up to ½ of the configured target bit rate when no motion is detected in the image. Using the <i>Aggressive</i> option, the codec will allow bit rate to drop up to ¼ of the configured target bit rate when no motion is detected in the image. You can disable this feature by selecting the disabled option. |

2.3.4 Configuration / Video In / Point to Point

- Configure point to point video connections (up to three) for creating persistent video streams from the encoder to a network endpoint.

Point to Point Hide

Select a Connection : Point to Point 1

☐ Enabled

Description:


Encoder: Primary H.264

Destination IP:

Destination Port: (1 - 65535)

2.3.5 Configuration / Video In / Text Overlay

Text Overlay Hide

Image: 

☒ Enable

String Size Medium

String Position

String Text Text Box

(Set it to %dz for current date and time and to %tz only for the time)

To insert a text overlay:

- There are (2) available strings (Text blocks). Select string.
- Select string size.
- For string position click mouse inside string position box.
 - o Text bar will appear on video image.
 - o If you wish to relocate, simply click in desired position.
 - o Type desired text into String Text Box.
 - o Press Save Button.

2.3.6 Configuration / Video In / Motion Detection

Motion DetectionHide

Image:



Select a Region of Interest: Region 1

☒ Enabled

Region Position 0.715,0.506,0.874,0.672

Frame Count 4 (1 - 20)

Sensitivity 95 (0 - 100)

On Threshold 20 (0 - 100)

Off Threshold 10 (0 - 100)

Select from 1 of 4 available regions:


- With mouse click on region position box.
- Bring mouse pointer to view window and drag box around area for motion detection.
- Select desired Frame Count, Sensitivity and Thresholds.
- Press "Save" button to store information.
- You can select up to (4) separate "Motion" windows.
 - Frame count: Number of frames required to trigger motion
 - Sensitivity: No sensitivity, 100 MAX sensitivity
 - Threshold: % of image required to trigger, both threshold must have a value; "off" value must be lower than "on".

2.3.7 Configuration / Video In / Privacy Zones

Privacy Zones are used to block out video in areas view is not permitted or desired.

Privacy ZonesHide

Image:



Refresh

Current Position Pan -85.78 Tilt -1.54 Zoom 0.00 Refresh Position

Select a Privacy Zone Zone 1 ▼

☐ **Enable**

Position

Pan

0.00

(-180.00 - 180.00)

Tilt

0.00

(-90.00 - 90.00)

Zoom

0.00

(0.00 - 100.00)

Size

Width

100

(1 - 100)

Height

100

(1 - 100)

Use Current

Configuration

Please select from the following subsections:

System	Date / Time	Network	Video In	Audio In	Audio Out	User Accounts
--------	-------------	---------	----------	----------	-----------	---------------

General

Hide

Sampling rate (Hz): 8000

Gain: 10 (0 - 20)

Compression

Hide

Type: G711

Mode: ulaw

Point to Point

Hide

Select a Connection : Point to Point 1

☐ Enabled

Description:

Destination IP: 0.0.0.0

Destination Port: 0 (1 - 65535)

Save

Cancel

Under the **Configuration** section, select the **Audio In** tab to perform the following operations:

- Configure audio input compression parameters.
- Configure point to point audio connections (up to three) for creating persistent audio streams from the encoder to a network endpoint.

Configuration

Please select from the following subsections:

System

Date / Time

Network

Video In

Audio In

Audio Out

User Accounts

General

Hide

Sampling rate (Hz):

Gain:

14

(0 - 20)

Type:

PCM

Point to Point

Hide

☐ Enabled

Description:

☐ Use Multicast

Source Port:

0

(1 - 65535)

Save

Cancel

Under the **Configuration** section, select the **Audio Out** tab to perform the following operations:

- Configure audio output parameters.
- Configure a point to point audio connection for receiving a persistent audio stream from a network endpoint.

Configuration

Please select from the following subsections:

System Date / Time Network Video In Audio In Audio Out **Recording** User Accounts

☐ Enabled

Current Recorder State: Recording storage not configured

Storage Profile:

General

Hide

NVR Detection Mode: Server Ping ▼

Ping Timeout: 60 (1 - 3600 s)

Ping IP Address: 0.0.0.0

Grooming Mode: Chronological ▼

Maximum File Duration: 120 (120 - 3600 s)

Maximum File Size: 128 (8 - 1024 MB)

Video Input Selection

Show

Per-Input Configuration

Hide

Recording Status: Not Recording...

Record Video From: Primary H.264 ▼

Input Record Mode: Do Not Record ▼

☐ Record when connection with the server is lost. (NVR detection required.)

☐ Record on demand.

☐ Record on Motion Event

☐ Record when the specified I/O event occurs. (I/O event input required.)

I/O Event Input: ▼

I/O Event Input State: On ▼

Video Retention Time: 30 (1 - 365 days)

Save

Cancel

Video Input Selection

Hide

Select a video input: Video Input 1

Per-Input Configuration

Hide

Recording Status:

Not Recording...

Record Video From:

Primary H.264

Input Record Mode:

Record On Event

☐ Record when connection with the server is lost. (NVR detection required.)

☒ Record on demand.

☐ Record on Motion Event

☐ Record when the specified I/O event occurs. (I/O event input required.)

I/O Event Input:

I/O Event Input State:

On

Video Retention Time:

30

(1 - 365 days)

☐ Force Immediate Deletion of Video After Retention Time

☒ Mute Audio

Note: Recording Menu will **NOT** be visible unless activated; see 2.20 System configuration.

- Grooming mode; Select method to remove files from full SD card chronological will remove old files first.

2.4.1 Configuration / User Accounts

Under the *Configuration* section, select the *User Accounts* tab to perform the following operations:

Configuration

Please select from the following subsections:

The screenshot shows a web interface for configuring user accounts. At the top, there are tabs for System, Date / Time, Network, Video In, Audio In, Audio Out, and User Accounts. The User Accounts tab is selected. Below the tabs, there are three main sections: Authentication, User Accounts, and New User. The Authentication section has a dropdown menu for Authentication Method, currently set to Username/Password. The User Accounts section shows a list of users, with 'admin (Administrator)' currently selected. Below the list, there are input fields for Old Password, New Password, and a confirmation New Password, along with buttons for Remove User and Change Password. The New User section has input fields for Username, Password (twice), and a dropdown menu for Role, with options: User, Poweruser, Superuser, and Administrator. At the bottom left of the New User section is an Add User button. At the very bottom of the interface are Save and Cancel buttons.

System Date / Time Network Video In Audio In Audio Out User Accounts

Authentication Hide

Authentication Method: Username/Password

User Accounts Hide

admin (Administrator)

Old Password: Remove User

New Password: Change Password

New Password:

New User Hide

Username:

Password:

Password:

Role: User Poweruser Superuser Administrator

Add User

Save Cancel

- Select the web interface's authentication method. A dual passphrase is made available for additional security.
- Manage user accounts which have access to the device.

User Roles:

Administrator:	All is available
Superuser:	All is available except the user management
Poweruser:	All is available except the user management and the recording
User:	Only access basic operations: system information, live video (no ptz controls), date time management and password change

Maintenance

Please select from the following operations:

Retrieve system information file.

[Click here](#)

Perform a firmware update.

Update

Flash the status LED on the current device.

Identify

Reboot:

Device

Reset device to default settings:

Reset

☐ Include network settings


This section describes how to update your Moog EXO Cameras to newer firmware versions from the web application.

1. To find the latest file go to www.moogS3.com/technical-support/.
2. Click on "EXO PTZ Camera Firmware" - click, save file.
3. Navigate to your device's web application using your favorite web browser.
4. Click on the **Maintenance** tab.
5. Click on the **Update** button, locate downloaded firmware. You will be asked for the firmware update file; please select the **.iof** file which was provided by Moog.
6. You will see the following messages indicating the status of the update:
 - o Firmware upload in progress... (100%)
 - Lasts around 95 seconds.
 - o Firmware uploaded. Saving to internal storage... (0%)
 - Lasts around 45 seconds.
 - o Validating and decompressing firmware... (0%)
 - Lasts around 105 seconds.
 - o Firmware ready for installation. Rebooting device... (0%)
 - Web page will disconnect from device until device has rebooted.
 - You will be prompted for login once the device is up again.
 - Lasts around 110 seconds.
 - o Testing firmware stability... (26%)
 - Lasts 120 seconds.
 - o Firmware update complete. (100%)


4.0.0 Live Viewer

Use Live View for:

- Live Camera View
- Start and Stop Recording
- Pan / Tilt and Camera Control
- Setting Presets
- Adjust View Scale

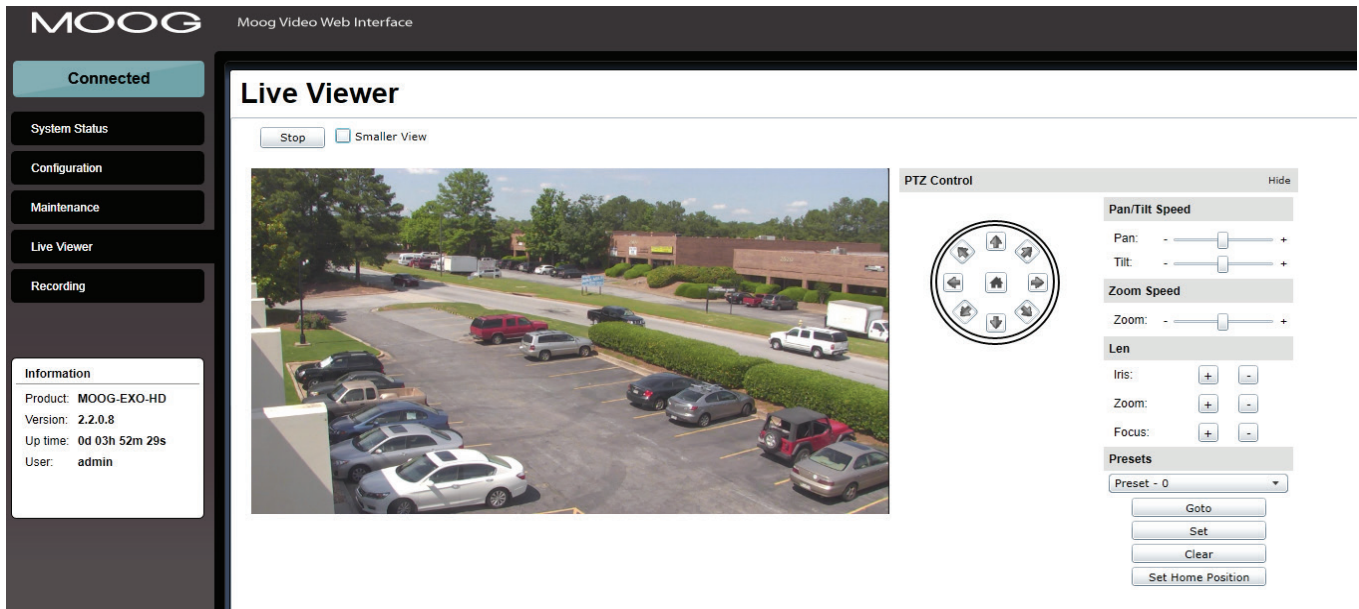


To enable live you must activate by pressing the “Play” button.

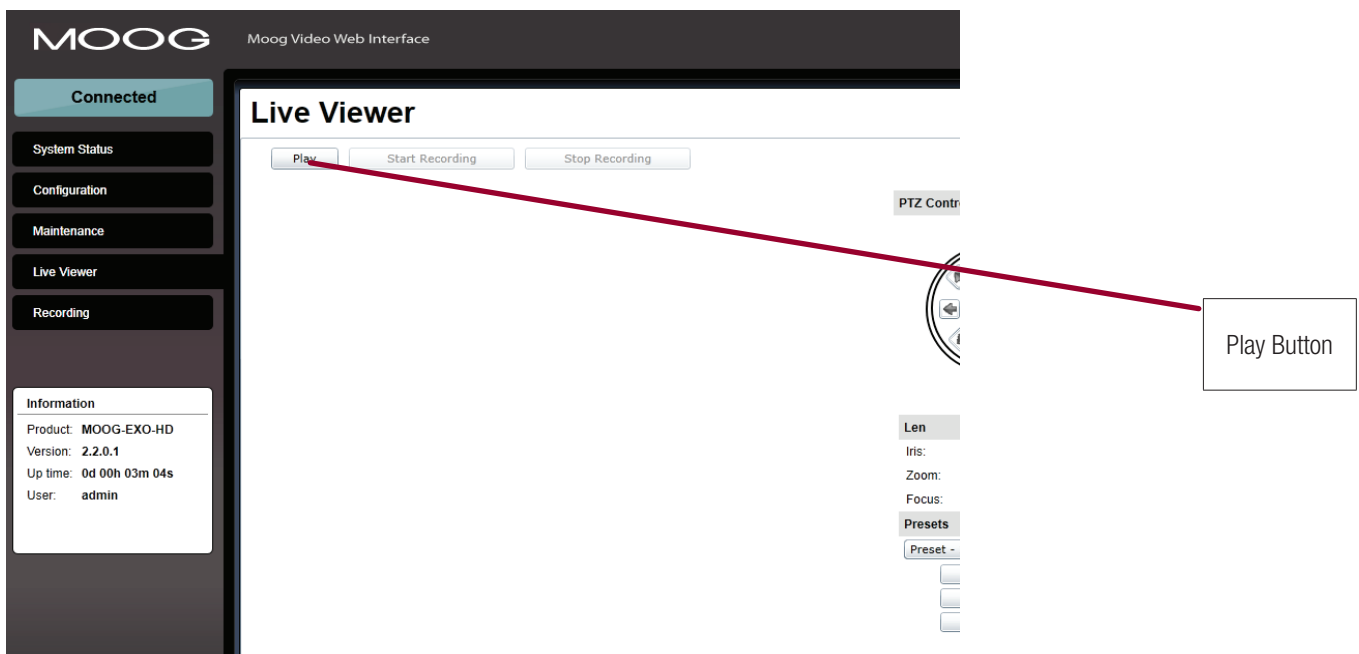

To adjust viewing scale for 1024 x 768 monitor, press smaller view.

4.1.0 Live Viewer Pan / Tilt and Presets

PTZ Control Hide

A circular directional pad (DPad) with eight arrow buttons: up, down, left, right, and four diagonal arrows (up-left, up-right, down-left, down-right). A central button with a house icon represents the home position.

Pan/Tilt Speed
Pan: - [slider] +
Tilt: - [slider] +

Zoom Speed
Zoom: - [slider] +

Len
Iris: [+] [-]
Zoom: [+] [-]
Focus: [+] [-]

Presets
Preset - 0 [dropdown arrow]
[Goto]
[Set]
[Clear]
[Set Home Position]

Pan/Tilt Controls

Lens Control

Preset Controls

- Pan Tilt Control; To operate Press Arrow in desired direction of movement.
- Use Pan / Tilt speed slider controls to vary Pan / Tilt speed control, to increase speed, slide control knob to the right.
- Lens Function use +/- buttons to update Iris, Zoom and Focus.
- Preset Functions.
 - o First Select Preset Number.
 - o Then position Camera and lens to desired position.
 - o Press "Set" to save Preset.
 - o For additional presets, repeat process.
 - o To clear, select desired preset press "clear".
- To establish a home position – move the camera to desired position, press set home position – Pan Tilt will use this as default start up position.

5.0.0 Recording

Recording

Select a video input:

[Refresh Video Playback Inputs](#)

To activate recording mode you must go to Configuration / System / Use Recorder Mode. Click “Use Recorder Mode” checkbox. This will activate additional Recording controls in the recording window. You must “Save” and then “Reboot” after making this change.

> Select Video Input

Recording

Logout

Select a video input:

Video Input 1

[Refresh Video Playback Inputs](#)
[Refresh Recorded Video](#)

Time Format:

UTC time

- + 1/1/1970
- + 4/23/2013
- + 4/24/2013
- + 4/25/2013
- + 4/26/2013

> Select Date of the Recording

Recording

Logout

Select a video input:

Video Input 1

[Refresh Video Playback Inputs](#)
[Refresh Recorded Video](#)

Time Format:

UTC time

- 1/1/1970 [Refresh](#)

[Select All](#)

[Lock Selected](#)

[Unlock Selected](#)

[Delete Selected](#)

Clip Start Time: 1:48:15 AM - Duration: 00:00:06



Clip Start Time: 2:00:11 AM - Duration: 00:00:08



Clip Start Time: 2:00:45 AM - Duration: 00:00:12



Clip Start Time: 2:02:27 AM - Duration: 00:00:13



Clip Start Time: 3:46:06 AM - Duration: 00:00:28



- + 4/23/2013
- + 4/24/2013
- + 4/25/2013
- + 4/26/2013

Then select the filed clip you wish to view


Note: You must have either VLC Player or Windows Media Player installed.

6.0.0 Performing Batch Firmware Update


This section describes how to perform a batch update of multiple Moog EXO Camera devices to newer firmware versions from the MDT.

The batch firmware update works by starting a firmware update session. Only one session at time is allowed and only 20 devices can be selected by session.


From the MDT, select one or more devices of the same type.

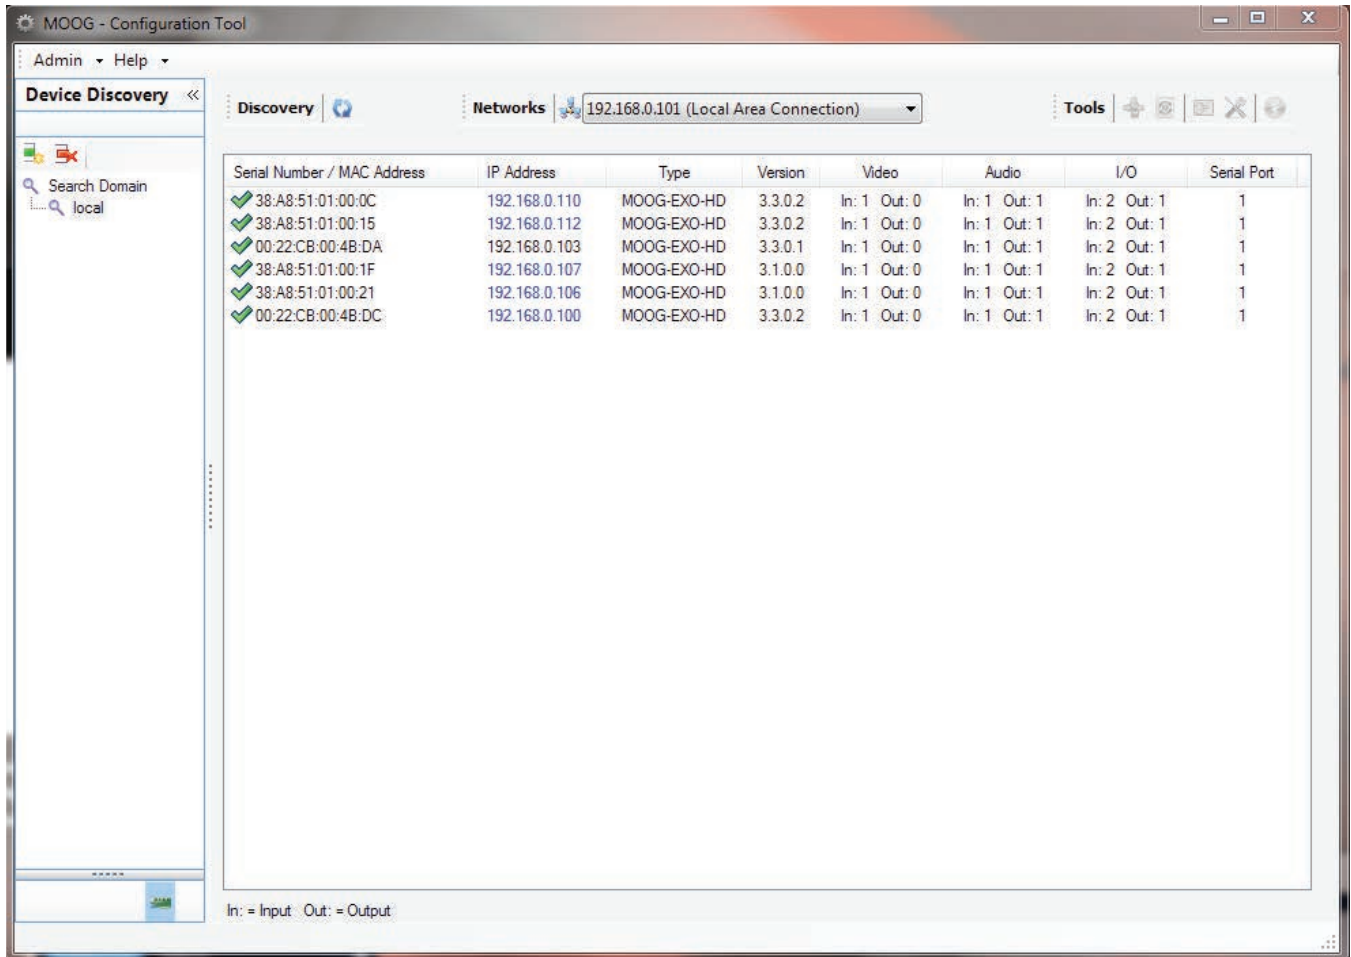


By using the right mouse button on the selected devices, choose the "Firmware Update" menu option.

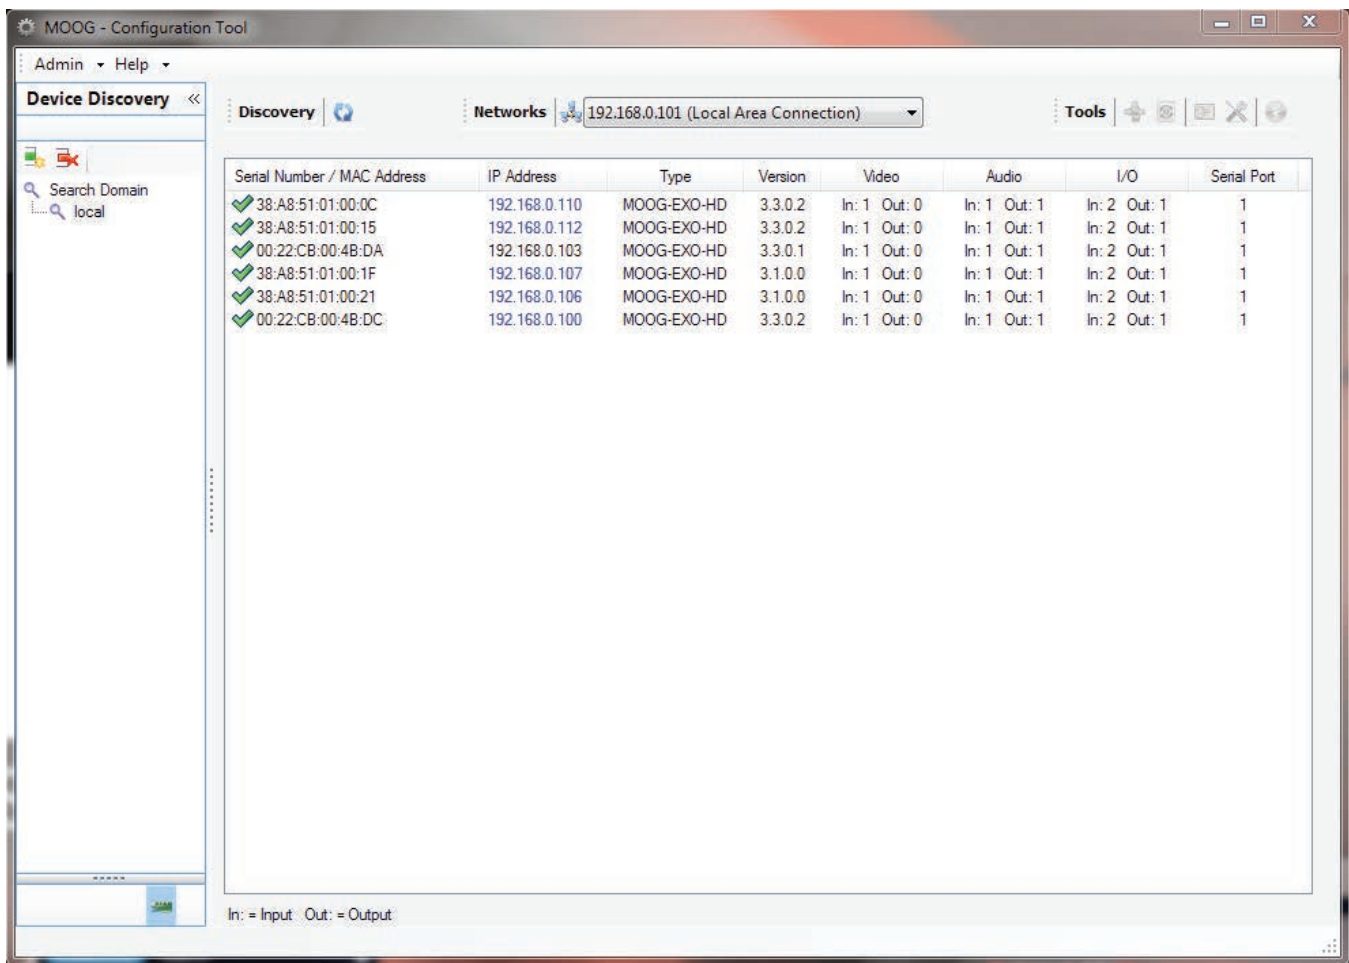

To start a firmware update session, choose the “.iof” file corresponding to the new firmware by clicking to the “Select File ...” button. Once selected, click the “Start” button.

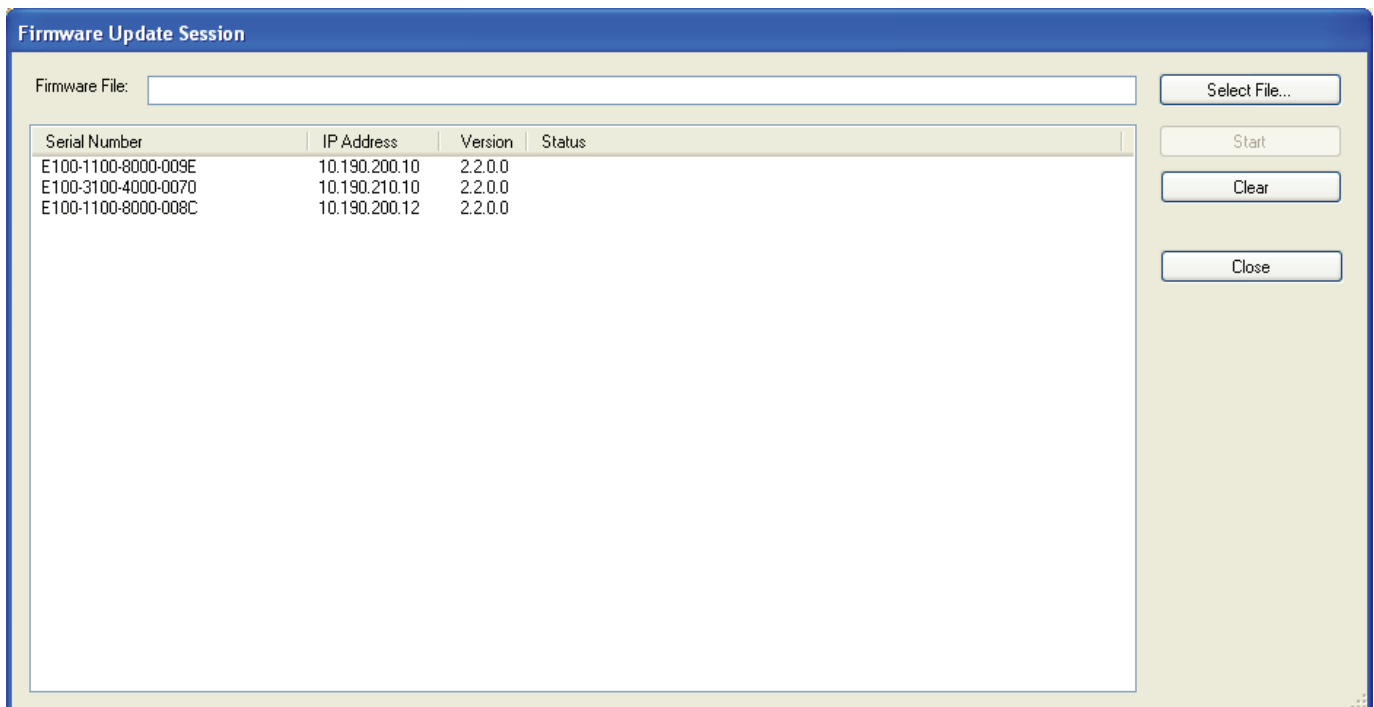

Once started, the “Firmware Update Session” window shows the progress of the firmware update. This window can be closed at any moment without losing the current session.

If closed, the progress of the current session can be followed by reopening the “Firmware Update Session” window by clicking the  button from the “Tools” toolbar.

Once done, clear the current session from the “Firmware Update Session” window and restart a new session if needed.

7.0.0 Point to Point Connections

Point-to-point connections between a Moog EXO Camera and a Decoder can be configured using the device's web application.

In the Moog EXO web application, in the **Configuration** section, go to the **Video In** tab. Scroll down all the way to the bottom of the configuration page. The last 3 sections are named **Point to Point 1, 2** and **3**.

Here's a quick overview of the settings available for a connection:

- **Enabled:** Indicates whether this connection is to be used.
- **Description:** Free-form user description of the connection, not used by the device.
- **Encoder:** Indicates which video feed is to be sent over the point-to-point connection. Possible values include «Primary H.264 » and «Secondary H.264». These values refer to the encoders configured in previous sections of the same web page.
- **Destination IP:** Address where to send the video. This is usually the address of a Decoder. The destination can also be a multicast group address. DNS names are not yet supported, only IP addresses.
- **Destination Port:** Network port where to send the video. This value must match the port value in the Decoder.

Once all the settings have been set, click on **Save** at the bottom of the page to apply them. The Moog EXO Camera then creates or updates the connection as needed.

8.0.0 Troubleshooting Guide

- Device does not seem to boot-up
 - o Verify that a 24Vac power supply is connected to the device.
 - o When a valid power source is detected, the status Pan / Tilt LED, power will light up GREEN.
- Cannot discover the device or communicate via the network
 - o Dynamic discovery of the Moog Camera requires multicast networking to be supported by your network and switch equipment. (Bonjour protocol)
 - o Make sure you have connected the device to your network.